



Ultraframe[®]
Transforming light and space



V4 | January 2021

GLASS ROOF

SURVEYORS INFORMATION

WELCOME

This guide has been written for those who survey, design and order conservatories, glass extensions, orangeries and super-insulated columns using Ultraframe roofing systems.

The objectives of this guide are that you will be able to:

- A) Professionally conduct an on-site survey
- B) Design and draw all roofs, frames, cill and base details
- C) Translate all dimensions taken into manufacturing sizes
- D) Confirm all details are to the satisfaction of the customer

It is recognised that basework construction methods vary in different areas of the country and this guide may need to be adapted to suit your own on-site requirements.


There are a number of Ultraframe brochures that need to be referenced in conjunction with this guide. They are: Glass Roof Technical guide, Classic Low Pitch, insulated internal pelmet and traditional Orangery.



CONTENTS

section 1	Surveying The Site	5 - 8
section 2	Site Survey Checklist	9 - 10
section 3	Designing The Base	11 - 13
section 4	Designing The Doors and Frames	14 - 15
section 5	Designing The Glass Roof	16 - 30
section 6	Component cross sections and dimensions	31 - 37
section 7	Marley Classic box gutter adaptors	40 - 41
section 8	Marley Classic rainwater outlets	42
section 9	Your Notes	43

This surveyors guide should **always** be read in conjunction with our other guides and U-Design software such as the Glass Roof Technology guide, Classic Installation and Formulae guides. There are also other application specific guides such as Super Duty Eaves / Orangery etc.

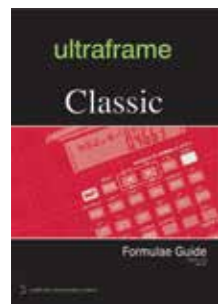

Formulae Guide



Livinroof Installation Guide



Livinroof System Overview and Design Guide



Livinroof JHAI Building Regulations Brochure




Classic Installation Guide



Glass Roof Technology Guide



Insulated internal pelmet Installation Guide

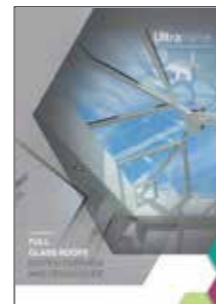

Insulated internal pelmet System Overview and Design Guide

STRUCTURAL DESIGN GUIDELINES

Ultraframe – as the market leading brand – wants to ensure that its customers and users are working to the best codes/design standards. Most domestic conservatories are exempt from Building Regulations and so most of the time a conservatory didn't need to comply with BS6399 but Ultraframe's brand positioning was that each roof was designed to a postcode and was more than fit for purpose (peace of mind). BS6399 has now been superseded by Eurocodes and Ultraframe is now working to these.

By updating to Eurocodes we are ensuring the roof stay ahead of competitors and continues to be well positioned should for example CE Marking become mandatory on the roof in the future

Ultraframe uses software called U-Design inside which is an electronic rule book of structural guidelines called eSDG. The eSDG has been updated to include;

- Eurocodes now in place of BS 6399 which is obsolete
- BreVe (which supplies the weather data inside eSDG) has finally fully adopted the Eurocodes and therefore the wind and snow loading they provide into U-Design has also been updated.
- The wind and snow loads in Eurocode are calculated differently and have also been revised with more updated average wind and ground snow loads in the UK. Previously BS6399 used a General Design approach which meant looking at the maximum wind speeds over a large area around the site which meant that the loads could be larger than necessary. Eurocode uses a directional approach based on the average mean wind speed and probability factor of exceeding this. The calculated wind load using this method is lower. We have looked at a number of different postcodes around the UK (a mixture of city centre, town outskirts, countryside and coastal locations) and have looked at the current output on the SDG and compared this with the new outputs. In all instances the wind load has reduced

Certificate of Authenticity

Conservatory roofs are sent to site with a registration form that the fitter passes to the homeowner, who then registers with Ultraframe and in return receives a 'Certificate of Authenticity', confirming that they have had the genuine Ultraframe product installed. They also receive a FREE conservatory maintenance manual with hints and tips on how to care for the new conservatory.

As part of our philosophy...

We want to make trading between our trade partners and us, easy and error free. That's why our vision is to receive orders electronically from our trade partners. In fact, we encourage our partners to design a conservatory in the home or showroom, structurally prove it and 'fire it' through for computerised manufacturing, virtually untouched by human hands!



U-Design software visualises and designs conservatories

We rigorously tested our roof and alternatives - ask for the DVD of the aero engine at the Wintech Test Centre



- BreVe has also changed how they locate postcode data. Previously they used information from Ordnance Survey and now they are obtaining this from NASA. In addition they have improved the way they pinpoint this information making the information more accurate. This means that some altitudes will change which affects the snow load calculations.


ADDITIONAL NOTES:

1. This means that roof projects are now more accurately specified for loads than before - this does not mean that we were wrong before just that we have improved the way the loads are calculated based on the latest information available.
2. As with BS6399, the software is looking at the loadings and the specification of the roof only, not the whole structure.
3. There is a distinct possibility that a roof MAY have a lower cost now based on Eurocodes than previously.



ACCREDITATIONS


Over 1½ million Ultraframe glazed roofs have been supplied and are performing day in day out. **Ultraframe. Tried. Tested. Trusted.**



BBA APPROVAL INSPECTION TESTING CERTIFICATION
CERTIFICATE 01/3793


Accreditations

The British Board of Agrément is part of a Europe wide accreditations body that tests both innovative building products and those for which no national standards exist. The Ultraframe Glass Roof was the first glazed roof system to be tested and accredited by the BBA in 1996 and has maintained continuous certification since.




ultra
installer

In 2004 Ultraframe established its national network of elite retailers. Each member is inspected every other year by Ultraframe's partner the BBA – the inspection includes site work and the processing of an order from receipt to completion. Consumer references are also taken up.



CE

Within some projects there are critical structural elements such as 'goal post' beams and supports which are used around large bi folding doors or to support box gutters where a glazed roof meets a wall or other roof. These crucial structural components now have to be CE Marked and Ultraframe's manufactured items have this accreditation. Factory audits conducted by the BBA.



bsi. ISO 9001
Quality Management

Ultraframe operates a quality system which means it is independently assessed every quarter by BSI. This means an audit by trained inspectors to ensure we design, manufacture and supply in accordance with ISO 9001:2008 quality standard.

The accreditations above apply to some/all of the Ultraframe brands identified above. These accreditations **ONLY** apply to conservatories, orangeries and extensions that feature Ultraframe roofs. **Always ask for Ultraframe by name.**

SURVEYING THE SITE

The Surveyor's Role

To confirm all details agreed between the salesperson and the houseowner which is a very responsible role. Great care and skill is needed to translate all the information agreed between the conservatory designer (salesperson) and the houseowner. **All contracts are subject to final survey and planning/building regulation approval (if needed) before any construction or manufacturing procedures take place.**

Step one - SITE VISIT

Agree a suitable time for the survey with the houseowner during "Day-light" hours.

You will need

- A) A4 Graph paper and pen / pencil
- B) A tape measure or telescopic ruler / measuring rod
- C) A level (1200 mm preferably)
- D) A digital angle meter
- E) A straight edge (the longer the better)
- F) A telescopic ladder / collapsible ladder
- G) A camera ie. Polaroid / Digital

A laser level and laser distance measurer is recommended on larger projects.

Be Aware - If when preparing the groundwork for the conservatory footings excavation is necessary, you may need a skip. Is there room to park a skip on the drive (be careful if it's tarmaced) or on the highway? If on the highway you will need permission from the local authority. If left overnight it will need to be lit.

Take Note - If mixing your own concrete or using an extension lead is there a socket to plug the mixer into? Is there a tap to add water to the mixer?

Step Three - INSPECTING THE EXISTING PROPERTY

Is there an existing patio area to dig up? Is there an existing structure to remove / demolish? Will existing garden walls or fences need to be moved? You may need a skip for any one of the above. Will existing flower beds or ornamental ponds be affected? Inform the customer and ask them to deal with them prior to commencement of groundwork.

If pebble dashed or rendered, are there any "hair-line" cracks evident? Settlement cracks between bay windows? If there are, ensure you point them out to your customer and if need be, photograph them. If you don't the customer may hold you responsible after installation. camera is ideal for this purpose.

Step two - SITE ACCESS


BE OBSERVANT - BE AWARE - TAKE NOTE!

Be Observant - Is there access to the rear of the property? If a terrace row, is there access from a back street or will all goods, including wheelbarrow, have to be taken through the house? If a semi-detached, is there a path down the side? If there's a drive, is it wide enough? If there's a garage on the drive, is there a back door to take materials through and is it wide enough? Careful attention is required, we really don't want to lift materials over the garage roof or have to ask the next door neighbour to lift materials over their fence!

THE BEST WAY TO SURVEY

The best way to survey a property is to sketch out a plan and an elevation of the proposed site showing all existing windows, pipes, drains and other possible obstructions - (see sketch).

The dimensions between each feature should be indicated and the position of the proposed conservatory. If you are carrying out several surveys in a day and drawing the results up at a later time, it is a good idea to reinforce your survey sketch with a photograph of the site. A 'polaroid' or 'digital' camera is ideal for this purpose.

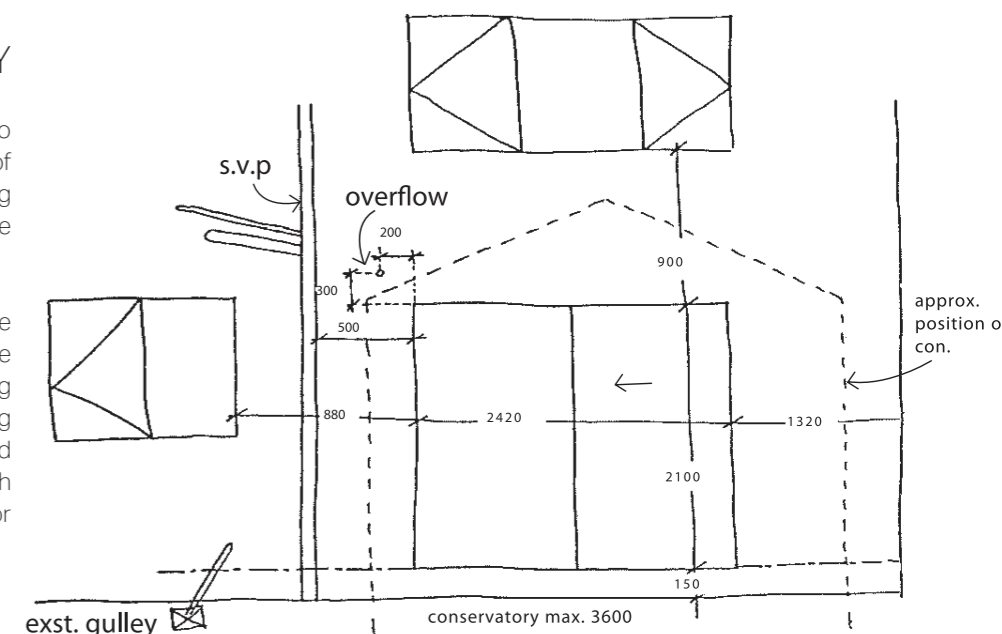


Section 1

SURVEYING THE SITE


Take note of the brickwork type and condition.

Is the brickwork still available? Does the customer want a matching dwarf wall? How old is the property? How many years weathering has the brickwork endured? Always offer a selection of brickwork to the customer and let them choose. Place the onus on the customer. It may not be possible to match the brick, often a contrast is the safest option. You may consider using squint bricks or stone quoins or bricks which are cut and bonded to form your angles.

Water penetration problem

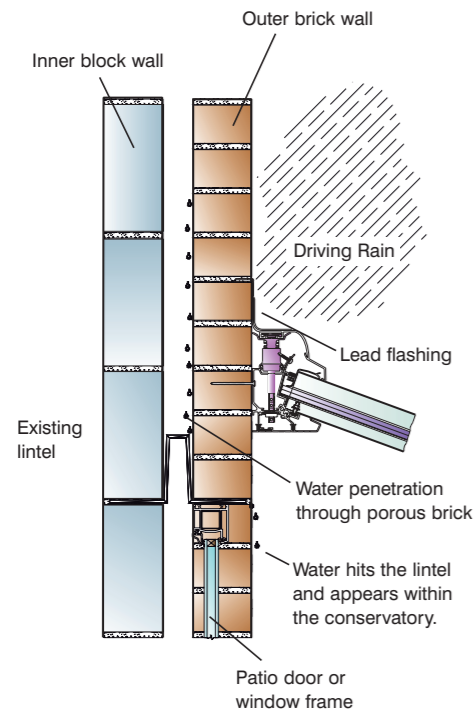

Water penetration solution

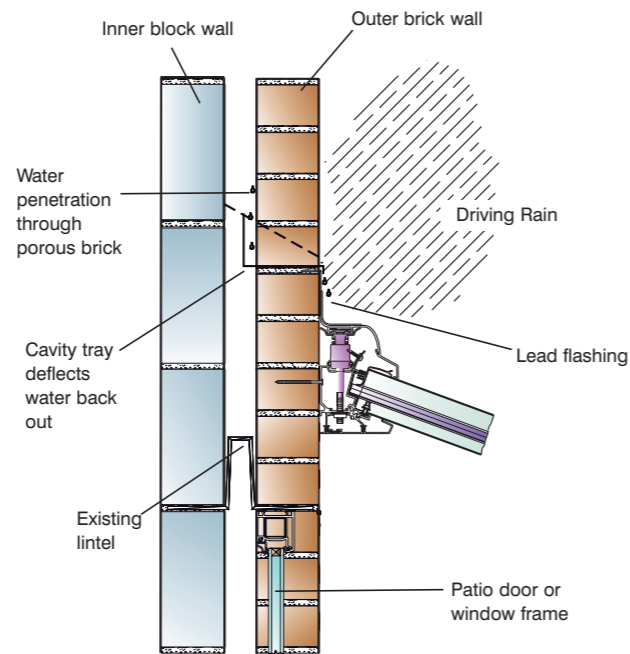

The bricks used in the construction of many modern homes are very porous. In any case all brickwork elevations are subject to water penetration. Therefore consider the installation of a cavity tray. This is often overlooked and is more difficult and expensive to install after the conservatory has been built. If the elevation on which the conservatory is to be built is exposed to the weather, a cavity tray must always be recommended to your customer. A cavity tray should always be considered when constructing a conservatory on a new house that is covered by the Ten Year NHBC (National House Building Council) Buildmark Guarantee. Any problem occurring from water ingress due to the lack of a cavity tray will not be covered by the NHBC Guarantee.


If for whatever reason a cavity tray cannot be installed, a minimum requirement would be a vertical soaker up off the roofline (75 - 150mm) then dressed back over with Code 4 lead, ground at least 25mm into the host wall. Lead should be treated with patination oil. If

abuting a rendered or pebbledashed elevation it would be proactive to fully seal the elevation with a proprietary clear silicone based sealant prior to installing the conservatory, rather than reacting to a later problem of damp penetration.


If installing against a bungalow fascia the existing soffit may become a part of the conservatory. If the bungalow roofing felt laid above the soffit board in the area of the proposed conservatory deteriorates this may result in the felt sagging and water ingress may occur. See detail below. If this happens, you unfortunately inherit the problem. You should at survey lift the lower roof tiles and inspect the felt. If perished, this should be pointed out to your customer and give them the option of replacing the felt with either Monoflex, DPC or one of the many proprietary products available.

High performance Type X Cavitytray offers unequalled benefits


Stepped trays for duo pitched / hipped end roofs

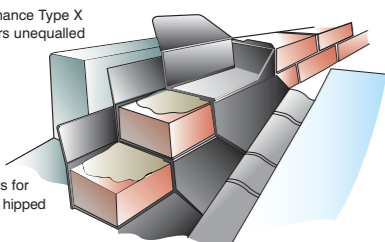

Only one course is cut out to accommodate the Type E Cavitytray
Straight trays for lean-to roofs

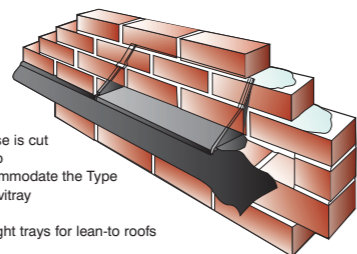

Overhanging Soffit

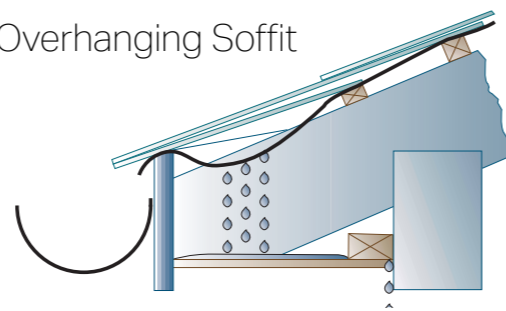

Section 1

SURVEYING THE SITE

Step 4 - THE HOUSE WALL

Conservatories should be designed from the roof down. However there are conditions that dictate starting from the basework working upward ie. constructing off existing basework, between fixed walls or the base position has to be there! This part of the survey is best conducted without the distraction of the customer present.

IS THE HOUSE WALL VERTICALLY PLUMB?

If the house wall leans forward: when the conservatory ridge butts to the house wall, the whole conservatory will be pushed forward of the basework, resulting in excessive overhang and incorrect angles. See diagram 'A'

If the house wall leans backward - then the conservatory dimensions need taking from top of the Dwarf Wall and a suitable tapered packer inserted between frames and house wall. See diagram 'B'

If vertically plumb - A standard 90° corner post fixed to the rear of both side frames which abut the house wall is a good idea. For example, should you wish to bring a RWP down the frame as opposed to returning on 'The House Wall'. It is also very useful should you wish to plaster or dry-line the inner house wall.



Diagram A

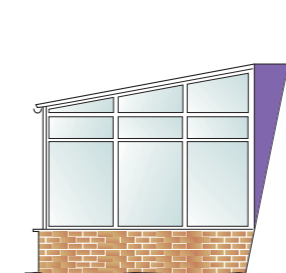


Diagram B

Observe the elevation: Is the upper elevation rendered and lower elevation facing brick? Are there any projecting brick plinths or bell casts which may affect the design of the conservatory? Check the position of rain water pipes, cables, air bricks, extractors, soil vent pipes and, of course, existing window and door openings. Moving soil vent pipes can be very expensive and will require building regulation approval.

If moving an obstruction is not feasible, then it may be necessary to cater for the obstruction when designing the conservatory. Soil vent pipe flashing kits are readily available. These are designed to fit around the stack and seal to the roof line. Fan assisted balanced flues are also a particular problem and it is extremely important not to build too close to these as it may effect their efficiency and the safety of the householder. British Gas Services Ltd state: A minimum distance of 300mm clearance below or to the side of an openable window or other opening eg. air brick/ trickle vent/extractor (maximum heat input up to 60 kw), 600mm for a natural draught flue. Advice should always be sought from a Gas Safe Registered Engineer prior to designing.

Note: The heat generated from a flue outlet can distort PVCu Cills etc. The fitting of a deflector would be advised.

Step 5 - GROUND PREPARATION

Careful attention to groundwork preparation is essential. Depth of foundations are always dependent on local ground

conditions. As a minimum requirement, foundations shall comply to BS 8004 (section 3: Shallow Foundations), and shall comply with any appropriate building regulations. In areas where harmful gases are a concern (eg Radon) expert guidance should be sought. If in any doubt contact your local authority Building Control Office.

Problems to the basework are, more often than not, hidden from sight. The obvious problems are gullies and manholes. It is not always possible to move an existing manhole due to its depth and run of the drainage system. The ideal solution is to raise the manhole to the height of the conservatory floor and fit a sealed (airtight) manhole cover which is suitable for internal use. These can be obtained with a tray top which will accept tiles or carpet to disguise the cover. (If a timber floor is to be fitted then a suitable hatch needs to be installed) Access to manholes is a legal requirement. Try to work out the position and direction of underground drainage pipes by following the run from the soil stack and other waste pipes to any manholes which are visible.

If necessary lift the manhole cover to check the depth and direction of all the drainage. Flushing a coloured drain dye or milk may help if there is any doubt about this. Be aware that manholes are sometimes covered by the DIY or 'cowboy' patio builder. If an existing drain runs under the proposed conservatory it will have to be encased in pea gravel then concrete and possibly a lintel bridged over the drain if being crossed by a dwarf wall.

Note: Terraced houses with back yards need careful consideration. Beware of the public sewer running through each back yard. You will always need a 'Building over sewer agreement'. Again, check with your local authority Building Control Office.

Step 6 - CUSTOMER INVOLVEMENT

Once all the possible problems have been identified this is the best time to involve the customer. Discuss your findings with the customer and always "plot out" the proposed conservatory with the customer present. If necessary use stones or pegs to illustrate the size and shape of the conservatory. Always make sure that when discussing dimensions with the customer, you qualify the differences between the external base size and the internal floor area. Also confirm the height of the dwarf wall above finished floor level, if required.

Note: When deciding on the dwarf wall height take into consideration the "lie of the land", generally, if the garden slopes downhill make the dwarf wall shorter. If the garden slopes uphill, maybe higher? When the customer is sitting down, can they comfortably see over the wall to the garden?

It is good practice to ask the homeowner to notify their insurance company that work is taking place at their home. Also once installed the insurance company need to be notified for them to assess the increased value and subsequent re-building costs.

Section 1

Section 2

SURVEYING THE SITE

Compressions and tensions explained.

When a tie bar is located under the finial point, it provides rigid support to that end of the ridge. If no tie bar is there, the hip bars support the ridge instead. This puts the hip bars in to compression. These push outwards at the external eaves corner connection. As a result of this, the eaves beams down either side of the conservatory are now trying to pull away from the house. To maintain the equilibrium of forces, the ridge must therefore go in to compression and pushes against the host wall. These forces are shown graphically in the diagram below. If the host wall runs in, or away, the bars will not support the end of the ridge and compression cannot be established. If the load cannot be transferred down through the hip bars, it will displace it down through the side (transom bars). Due to the fact that side frames have very little lateral stability on there own, the eaves beam will bow due to the stress and this will result in ridge dip.

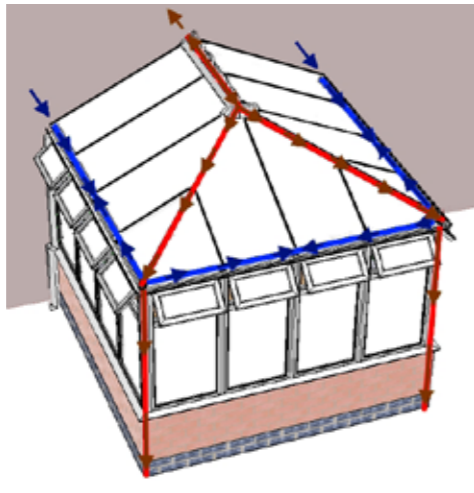


Diagram of the forces and load paths when a roof without a tie bar is loaded (downward load) - Compression in red, tension in blue.

Fixings into the host wall

The type of fixings required when installing a conservatory is entirely the responsibility of the installer. Brick, block and masonry substrates vary widely in quality; the performance of an anchor primarily depends upon the integrity and strength of the substrate material into which it is fixed. In general, the stronger the substrate, the greater the load will be before failure.

There are two typical kinds of load to consider. The first is tensile load, also described as 'pull-out' where a force would be required to pull a fixing out of its hole i.e. along its axis. The second is shear, where the force is at right angles to the fixing.

Torque controlled expansion anchors are far superior in performance than 'hammer-in' screw fixings, being typically in excess of 10x stronger for the same diameter.

The starter or wall plate bars require a positive fix at several points i.e. in close proximity to the eaves beam & ridge & at regular centres in between, the spacing are dependent on the type & condition of the wall. Weak, badly situated or insufficient fixings could fail & be pulled from the wall causing the frames/ eaves beam to be pushed forward & allowing the ridge to drop.

Structural Frames in conservatories.

It is your responsibility to ensure that all supporting framework and walls provide adequate lateral support in line with BBA certificate No. 96/3261.

The overall stability of the conservatory is to be proven by others and in this respect I advise you or ask you to advise your client to employ a Structural or Civil Engineer to check the conservatory for stability. Please do this before works start on site to avoid any corrective works being required.

The side frames/walls must provide conservatories with overall lateral stability and resistance to axial loading. Advice should be sought from the frame supplier for the specific use of members for the conservatory construction.

To fulfil the requirements of lateral stability on a 'free standing' roof Ultraframe would recommend the inclusion of Brick Piers or Portal Framework. These should be designed to the appropriate British standards, by suitably qualified personnel.

If you require we would be happy to specify and cost for an appropriate Portal Frame Structure for this particular project. However if the supporting sections are to be sourced elsewhere, Ultraframe cannot provide these designs or calculations as standard.

SITE SURVEY CHECKLIST

Conservatory site survey checklist - side 1

Photocopy this page for each site survey and file for reference	YES	NO	COMMENTS
1) Is planning permission or building regulation approval needed? If yes, who will apply?			
2) Is there sufficient access to the proposed conservatory? Including height and width restrictions for delivery of material, concrete, frames, glass & welded cills etc?			
3) Will construction involve crossing any public or neighbours path, garden, wall or hedge?			
4) Are there any existing structures to demolish?			
5) Will you need a skip on site?			
6) Is there an existing patio or path to be removed?			
7) Is there an existing retaining wall - will this need re-constructing?			
8) Are there plants, bushes, fish-ponds in the way?			
9) Are there any other visible obstructions on the ground?			
10) Is the house wall sufficiently out of plumb to require any allowance in the design of the conservatory?			
11) Are there any projecting bell casts, soldier courses, key stones in the way?			
12) Are there any signs of settlement or hairline cracks in the house wall - have these been pointed out to the customer?			
13) Is there a soil vent pipe, RWP, extractor fan or gas flue in the way of the proposed conservatory?			
14) Are there any TV, satellite or telephone cables in the way?			
15) Are there any existing window or door openings to be moved, altered or bricked up?			
16) New openings to existing property will require new lintels which will require building regulation approval.			
17) Are there any existing window or door openings to be included within the newly proposed conservatory? Very important if specifying a tie bar replacement kit. See Pg22.			
18) Are there air bricks or head ventilators in the existing property which will be encompassed within the new conservatory?			
19) If yes to question 18, these must be transferred through the proposed conservatory.			
20) What is the existing external wall finish: Facing brick, stone, render or pebbledash?			
21) If facing brick, is a cavity tray required?			
22) Is there a height restriction above the proposed conservatory ie. a bedroom window?			
23) Is there enough room above the ridge flashing trim to lead flash?			

Section 2

SITE SURVEY CHECKLIST

Conservatory site survey checklist - side 2

Photocopy this page for each site survey and file for reference

	YES	NO	COMMENTS
24) If installing to a bungalow fascia, lift the front row of tiles and check the roofing felt over the projecting eaves.			
25) Will the conservatory roof fit below the bungalow soffit board?			
26) Will the conservatory roof fit to the bungalow fascia board?			
27) Is the fascia deep enough and in good enough condition?			
28) When installing a roof to the fascia is there enough room to re-fit the existing gutter?			
29) Will you need to install a vertical damp proof course where the side frames abut the house/bungalow wall?			
30) Is the conservatory rainwater to discharge into an existing gully?			
31) Is a new gully required (connected to the existing system or to a new soakaway)?			
32) Is there a sufficient number of rainwater outlets for the size of roof?			
33) Is there an existing gully to move?			
34) Are there any existing underground drainage pipes to be moved?			
35) Are there any existing underground drainage pipes to be built over?			
36) Is there an existing manhole to be moved?			
37) Is there an existing manhole to be raised to the conservatory floor level then sealed with an airtight cover?			
38) Are there any pipes or cables to be catered for in the proposed build?			
39) Is the proposed level of the conservatory floor the same level as the house floor level?			
40) Will the difference in house floor level and the proposed conservatory floor level require steps?			
41) Will the difference between the proposed conservatory floor level and the outside ground floor level need a landing, steps and handrail?			
42) Is a dwarf wall required - what height?			
43) Are there squint bricks or stone quoins required or will you cut and bond bricks?			
44) Are there any new openings required in the proposed basework for doors?			
45) Is the site sloping away requiring extra height to the basework?			
46) Is the site sloping towards the basework requiring excavation?			
47) Will a retaining wall be needed?			
48) Is a new path or patio area required?			
49) Check coursing and spacing of brickwork against existing - ie Imperial or Metric			
50) Has all the detail been discussed and agreed with the customer			

Section 3

DESIGNING THE BASE


The difference between the house floor level and external ground level should be measured. Check also the position of the house damp proof course. If the conservatory finished floor is to be level with the house floor and this is more than 150mm above the external ground level, then steps will be needed.

Sloping sites can produce several possible problems. For instance, if the ground level is much lower than the proposed conservatory floor level, then it may not be feasible to install a solid floor in the conservatory due to the infill required. If a suspended floor is required this will add to the cost of the basework. If french doors or a single door open out and the land falls away, you will need to build a landing/platform (generally the width of the door(s) and the depth of the opening door, ie. 900mm + 400mm = 1300mm deep) for the customer to safely step out onto before walking down steps. Should the steps be higher than 600mm you will need to produce a hand-rail / balustrades. Approximately one step is required for every 150mm increment in height. This work should always conform to building regulations. Depending on which way the site is sloping, it could require additional height to the conservatory base wall.


Class B engineering bricks or similar should be used up to DPC level with concrete commons or concrete blocks being used underground and stepped if necessary. Alternatively, it may require part of the site to be excavated and a retaining wall built before the conservatory will fit.

It is advisable to start with the external base dimensions when designing the conservatory, as these are usually the largest dimensions on plan. (Except for the footings underground.)

Land falling away from conservatory

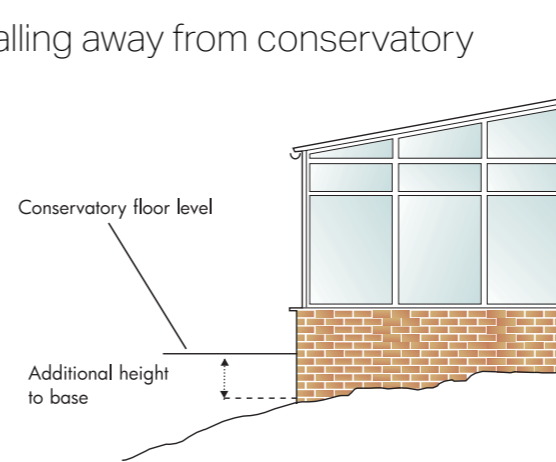


Land falling towards conservatory

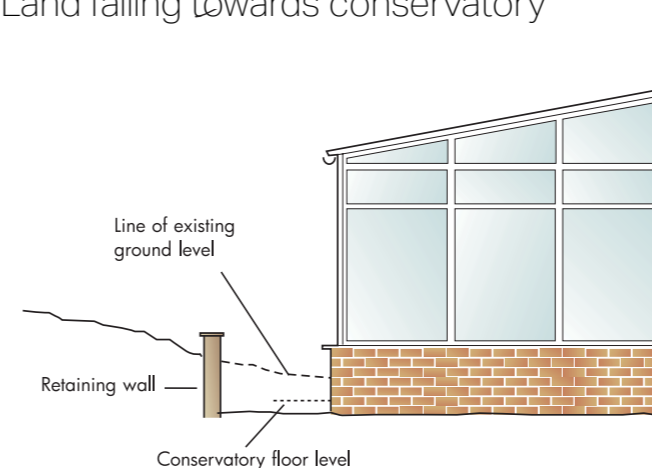


Setting out tips

1. Example Base Plan When building to a base plan as shown, to achieve accuracy of angles when setting out the base some people use templates or build to the welded cill. Welded cills are flimsy and not the most accurate method. Follow these steps for the best results, using the formulas below.


$$\begin{aligned} \text{Facet size} &= 3500 \div 2.4142 = 1450 \\ \text{Bay projection} &= 1450 \div 1.4142 = 1025 \\ \text{Long side} &= 4000 - 1025 = 2975 \end{aligned}$$

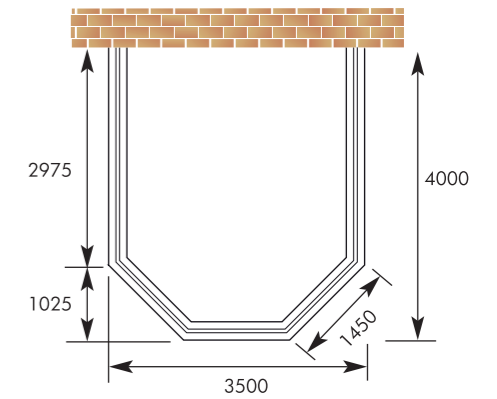

2. Set string lines for the external face of the brick to the overall width and projection. Check diagonals for being square.

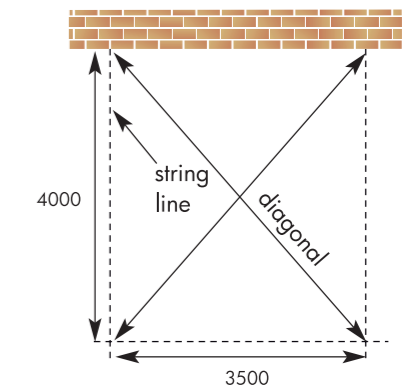

3. Measure back equally from each corner 1025mm as shown and set two more string lines. This will result in equal facets and 135° angles each time.

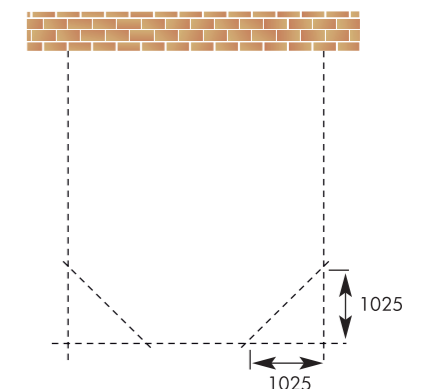

Section 3

DESIGNING THE BASE

Dwarf Wall

Most customers prefer a dwarf wall rather than the window frames of the conservatory sitting down to floor level. One disadvantage of a dwarf wall over full frames is that it reduces the internal floor area of the conservatory. This may be a consideration if the overall external size of the conservatory is restricted.

Another alternative is to "dry line" the inner wall, (which avoids a 'wet trade' and allows easy access to run electric cables or heating pipe work) this will also increase the inner floor area. However, the majority prefer a double skin dwarf wall to full height frames. The dwarf wall creates an impression of the conservatory being a part of the original house. Also the dwarf wall offers the advantage of an internal window cill or if high enough, a window seat.

The height of the dwarf wall needs to be carefully considered. This is usually expressed as a height above the floor level of the conservatory. The most popular heights are 450mm or 600mm. When discussing the height ensure you measure from DPC or conservatory floor level upwards, not from the outside ground level.

Where a dwarf wall abuts the host wall, a vertical DPC should be installed from the horizontal DPC in a vertical line (on the centre line of the abutting window/door frame) to the intersection of the roof line Code 4 leading/cavity tray.


Take note: does the garden fall away, then the wall height would be better at 450mm high, so that the customer when sat down can see over the wall into the garden. If the land is level then perhaps 600mm high. If sloping uphill then maybe higher? Also ensure you match the coursing to correspond with the original house. On modern property the coursing is usually in increments of 75mm. On older properties imperial sized bricks may have been used, these may be difficult or impossible to obtain and the modern metric equivalent may not course in.

Also note the vertical gap between the bricks. Are they tightly bonded, say 5mm. Does the customer want the dwarf wall base to match the house or built to standard width joints.

When abutting the dwarf wall to the host wall a proprietary stainless steel wall connector should be used.

MIX GUIDELINES


- Concrete 1 (cement) 2 (grit sand) 4 (20mm clean chip stone).
- Brick mortar 1 (cement) 4 (building sand).
- Stone mortar 1 (cement) 1 (lime) 4 (building sand)

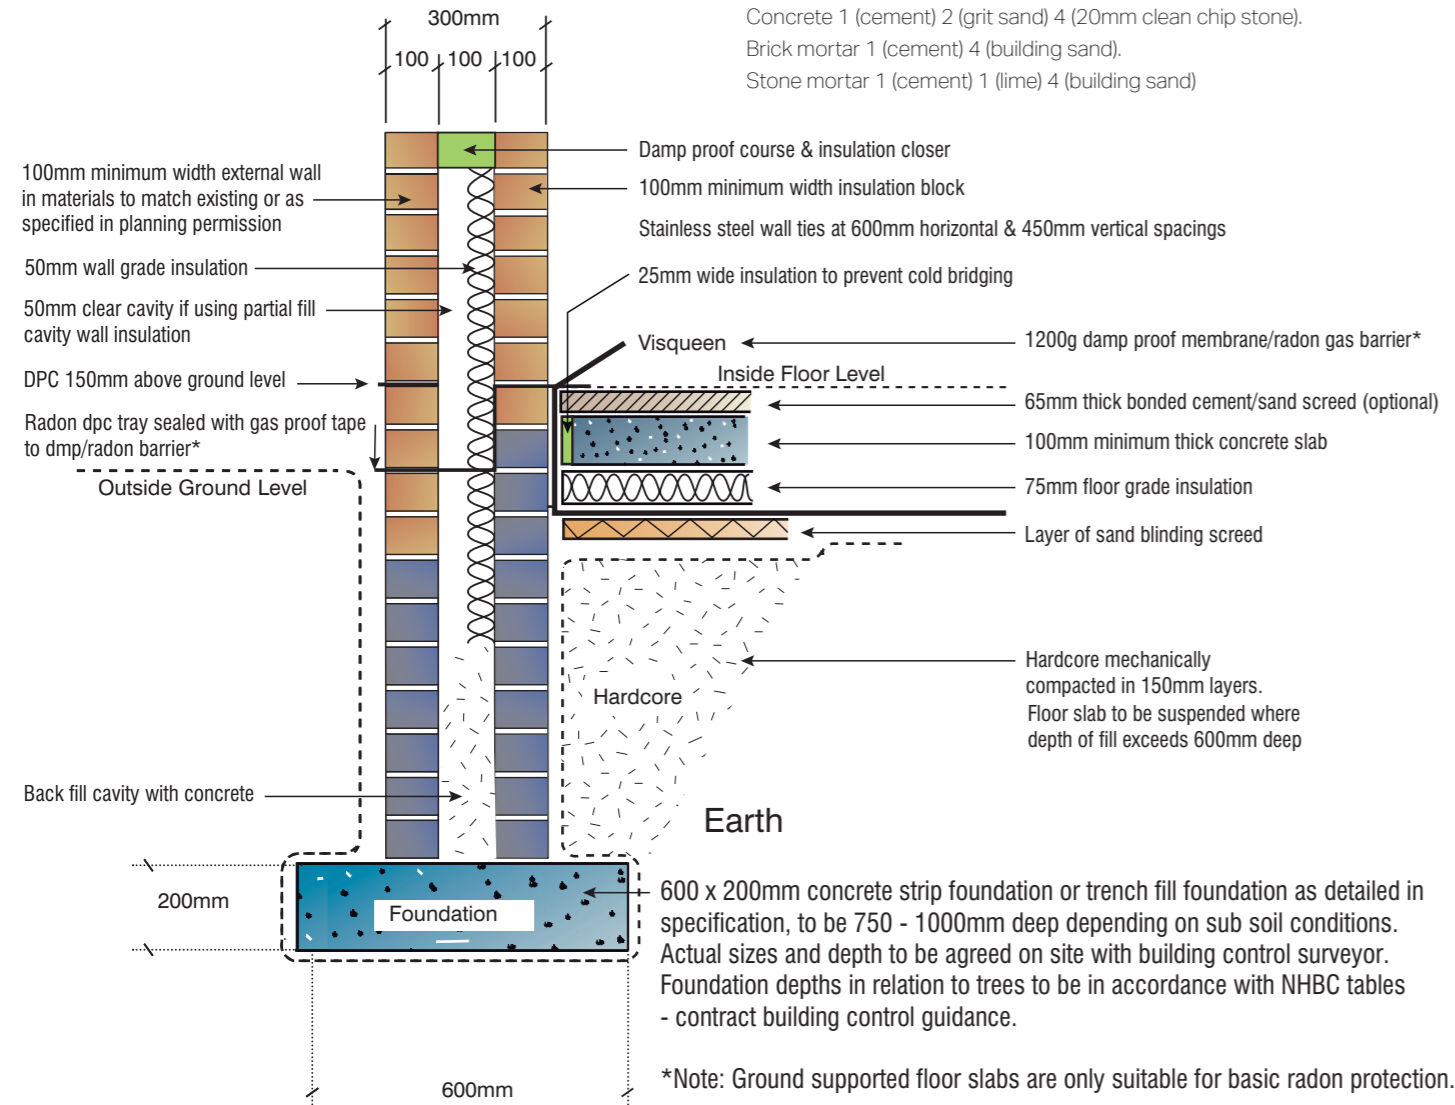

Section 3


DESIGNING THE BASE

Concrete Plinth

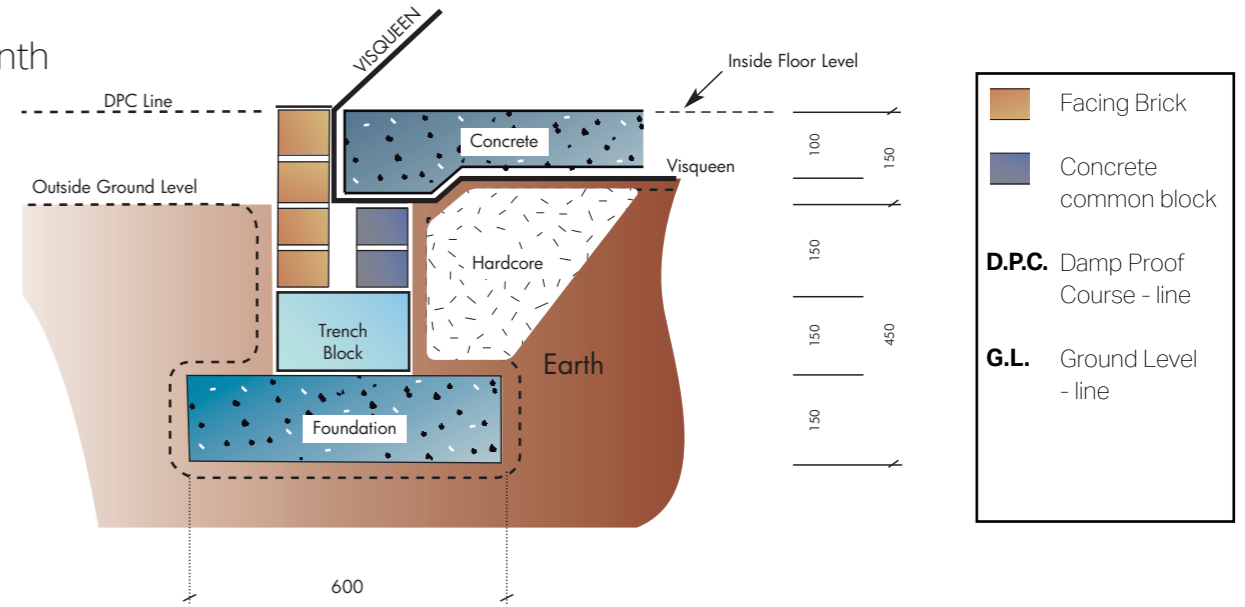

Positioning of doors


Many customers request the position of the doors in the conservatory as example A (below) with the doors in one of the front bay facets.

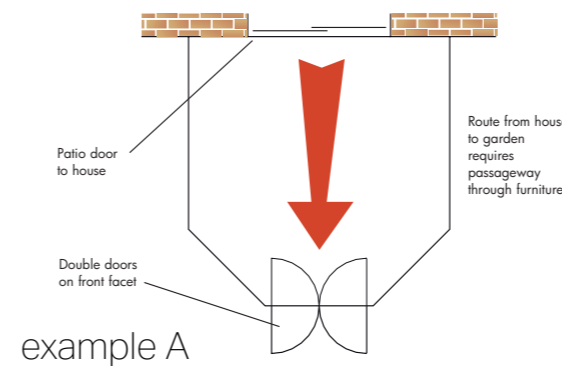

example A

A 100mm wide blockboard template which mirrors the outside face of the outer skin of brickwork, identical to the front facets only and returned 450mm down each side leg, then fully braced, is both cheap to manufacture and easily stored for further use.

It is far easier and cost effective to construct the door opening to be as near as possible to the door exit from the house wherever possible (as in example B, below).

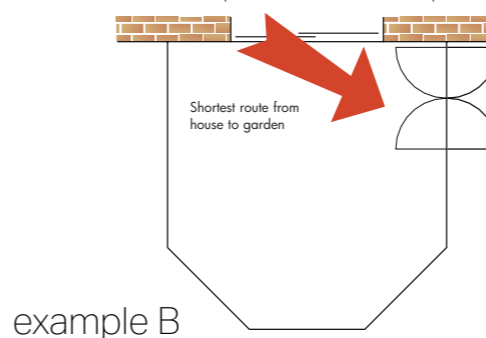

example B

Example A will create a problem for the builder if the conservatory is sitting on a dwarf wall. The corners of the brickwork in the position of the door opening have to be calculated to suit the relevant frame and cornerpost system being used. Having this 'break' in the ring of brickwork also weakens the structure. Sending out a welded PVCu cill to act as a template for the bricklayer is not recommended for the following reasons:

- A) A welded cill in one piece is usually too large to transport
- B) It is too flexible
- C) It may be damaged
- D) With doors in the centre, the cill would be in two halves

Practically, the customer benefits too, having a much larger area in which to arrange their furniture layout. Example 'A' always requires a direct passageway, generally through the middle of the conservatory to the garden.

Single doors and patio doors should always be considered. Single doors tend to be more reliable than french doors, especially if the conservatory door becomes the main route into the garden (they are much easier to toe and heel). They are also a logical choice for very small conservatories with a limited floor space.

Patio doors take up no space as they slide across themselves. Patio doors are probably not as suitable as a single or french door if they become the main thoroughfare from house to garden.



If the proposed conservatory needs a path or patio area constructing, then a useful tip when butting flags up to a dwarf wall, allow a 150mm gap and infill the gap with chippings to act as a soakaway for cill water run-off.

Section 4

DESIGNING THE FRAMES

Designing the frames

The internal frame dimensions (including corner post or baypole) can be calculated from the external base dimensions using the deductions in the table below.

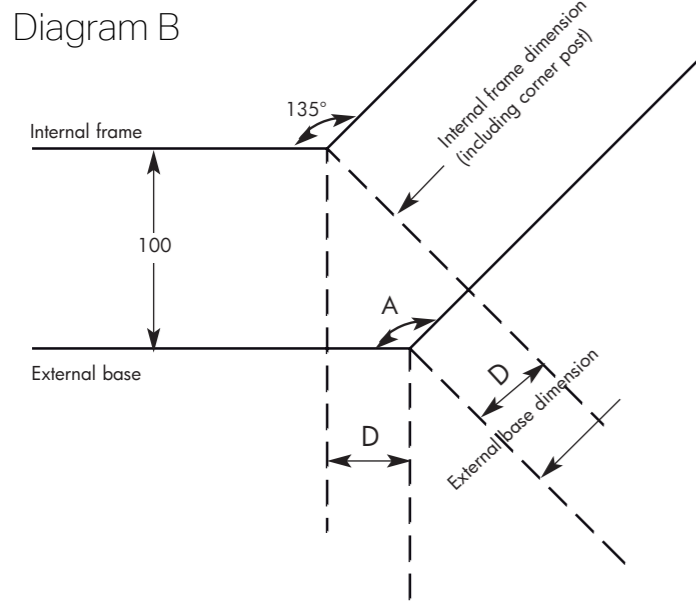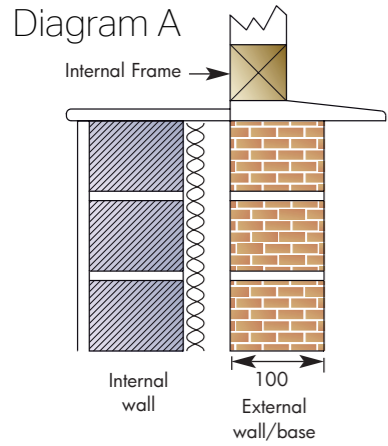


CORNER DEDUCTION - External base to internal frame							
ANGLE A	DEDUCT D	ANGLE A	DEDUCT D	ANGLE A	DEDUCT D	ANGLE A	DEDUCT D
90	100	113	66	136	40	159	18
91	98	114	65	137	39	160	18
92	97	115	64	138	38	161	17
93	95	116	62	139	37	162	16
94	93	117	61	140	36	163	15
95	92	118	60	141	35	164	14
96	90	119	59	142	34	165	13
97	88	120	58	143	33	166	12
98	87	121	57	144	32	167	11
99	85	122	55	145	31	168	10
100	84	123	54	146	31	169	10
101	82	124	53	147	30	170	9
102	81	125	52	148	29	171	8
103	79	126	51	149	28	172	7
104	78	127	50	150	27	173	6
105	77	128	49	151	26	174	5
106	75	129	48	152	25	175	4
107	74	130	47	153	24	176	3
108	73	131	46	154	23	177	3
109	71	132	44	155	22	178	2
110	70	133	43	156	21	179	1
111	69	134	42	157	20	180	05 c
112	67	135	41	158	19		

It is important to note that these deductions depend on the frames being positioned on the brickwork as shown in the diagram A ie: the internal face of the frames are in line with the internal face of the outer leaf of brickwork (100mm in from the outer face).

From the external base dimension the above deduction D is taken depending on the corner angle A to arrive at the internal frame dimension (see diagram B).

Example below shows the frame sizes calculated from the external base sizes (41mm deduction from each corner). Remember this is the internal frame line. To calculate the actual frame sizes you will have to deduct for corner posts or baypole, whichever you are specifying.

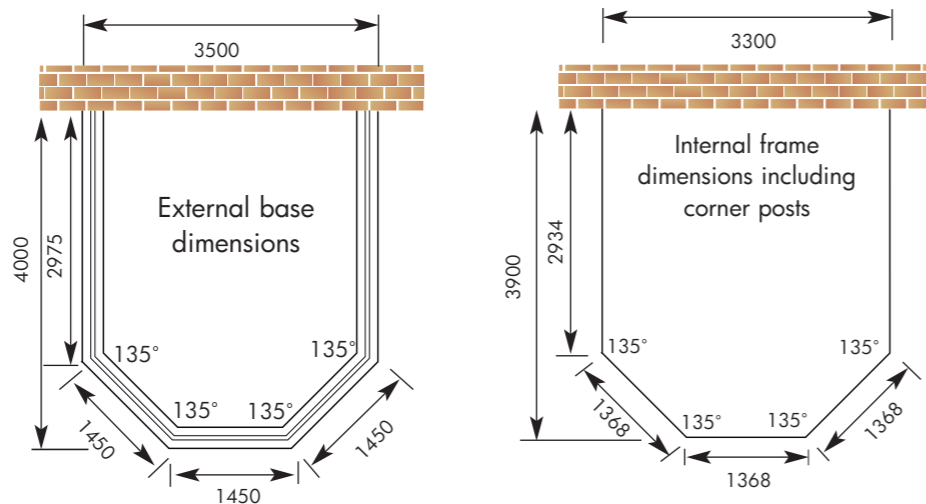

DESIGNING THE FRAMES

Internal facet sizes

After determining the overall external width and projection of the conservatory, the following formulae may be used to calculate the internal facet sizes:-


3 Facet Victorian

$$X = W \div 2.4142$$

$$Y = X \div 1.4142$$

$$Z = P - Y$$

(assuming equal facets and all angles 135°)

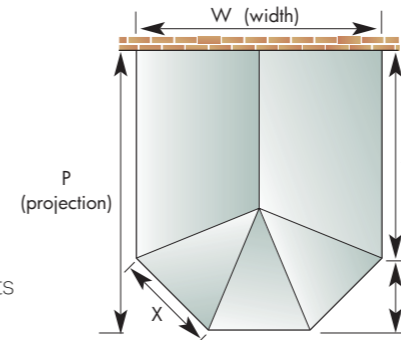

5 Facet Victorian

$$X = W \div 3.733$$

$$Y = W \div 2.734$$

$$Z = P - Y$$

(assuming equal facets and all angles 150°)

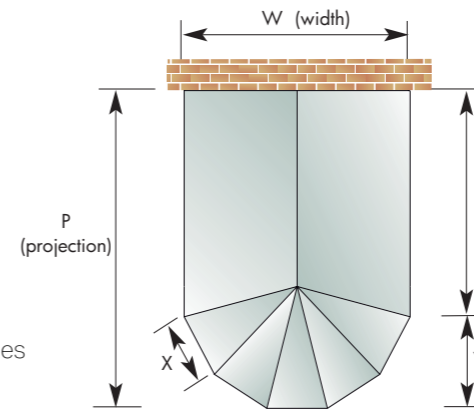


Diagram A


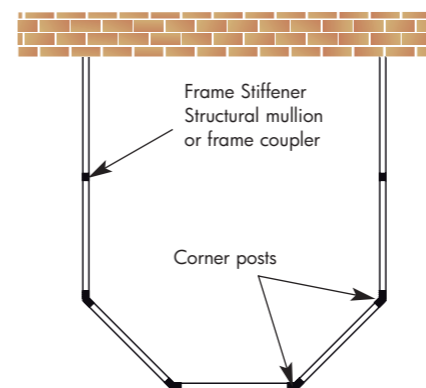


Diagram A illustrates internal frame sizes required when ordering Ultraframe Victorian roof

Section 4

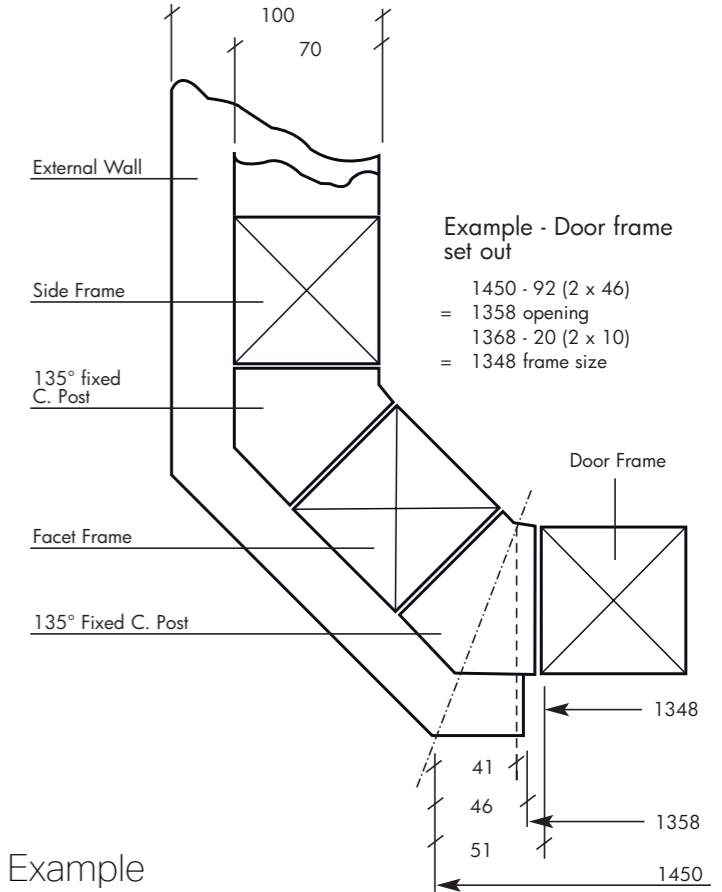

Example - Door frame set out


$$1450 - 92 (2 \times 46) = 1358 \text{ opening}$$

$$1368 - 20 (2 \times 10) = 1348 \text{ frame size}$$


Example

External Base Facet Size = 1450mm
 External Base Front Facet Return = 46mm
 External Base Front Facet Opening Width 1358mm
 Door Actual Size = External Facet Size 1450 - 82 (2x41) = 1368mm
 1368 - 20 (2 x 10 Cornerpost Deduction) = 1348mm.
 Door Set Out: as shown on page 8 (example A)
 Base Plan: as shown on page 9
 Internal Frame: as shown on page 9

Corner post to suit 135° & 150° (Ultraframe)

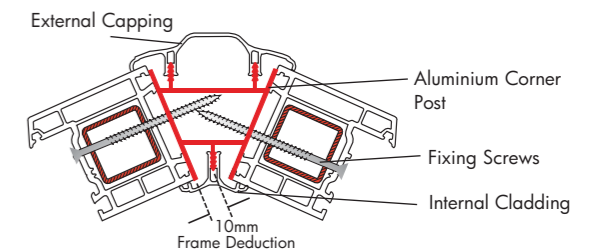

Frame stiffener (Ultraframe)

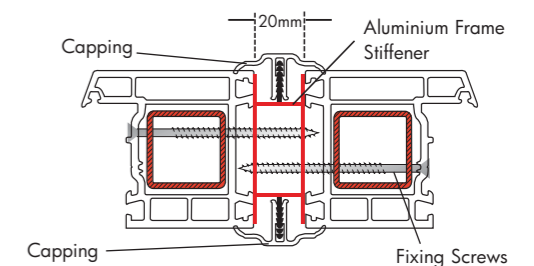

Section 5

DESIGNING THE ULTRAFRAME ROOF

Designing the roof

This is where all conservatory designs should begin, from the roof down, top to bottom. There are occasions when either the conservatory is being built on an existing base or the base has to be in a particular position, otherwise design from the top down. The roof should be treated as a separate structure, although Ultraframe and its fabricators have to be flexible in that they can (in most cases) design the roof bar spacings to line through with the mullions in the conservatory wall frames - for aesthetic reasons the customer may expect this. How often has the PVCu cill been fabricated to suit the already built base (even when the base angles are inaccurate) then frames are manufactured to suit the cill then the roof fabricated to suit the frames? Wherever possible the roof design dictates the frame sizes, which decides the cill size, which determines the base size.


The Glass Roof System

The following sections illustrate options and dimensional information for the surveyor. For snow and wind loads applicable to particular locations please refer to 'The UK Structural Design Guide' inside the U-Design software.

Eaves Beam - MULTI - STANDARD

When specifying the Glass Roof, the dimensions required are internal frame dimensions from point to point including any corner posts, bay-pole, structural mullions or jointing couplers that may have been used between the frames. See diagram B for multi Eaves Beam, see diagram C for standard and super duty eaves beam dimensions. See page 17 & 31/32 for more information.

Diagram B

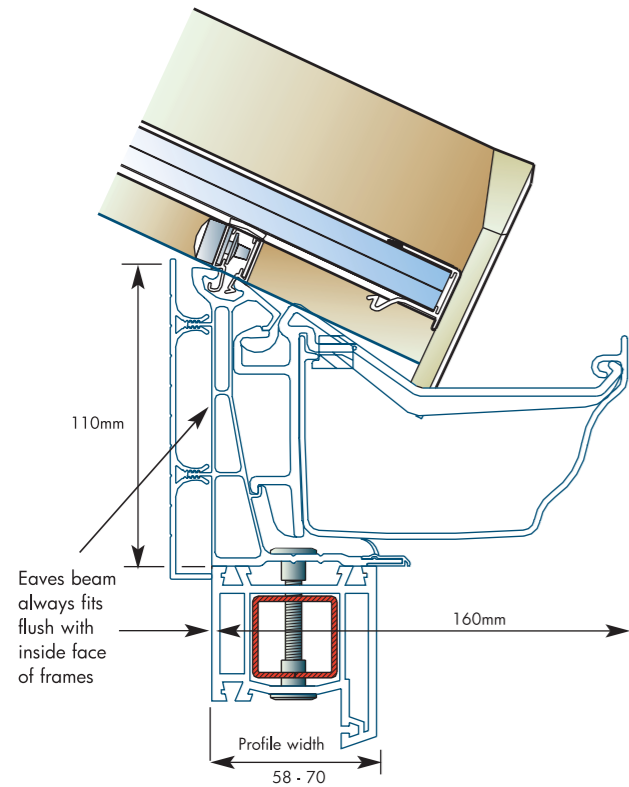


Multi Eaves Beam dimensions

Variable pitch from 15 - 35°. For greater or lower pitches use glazing bar packers (see diagram C)

Section 5

DESIGNING THE ULTRAFRAME ROOF

Diagram C

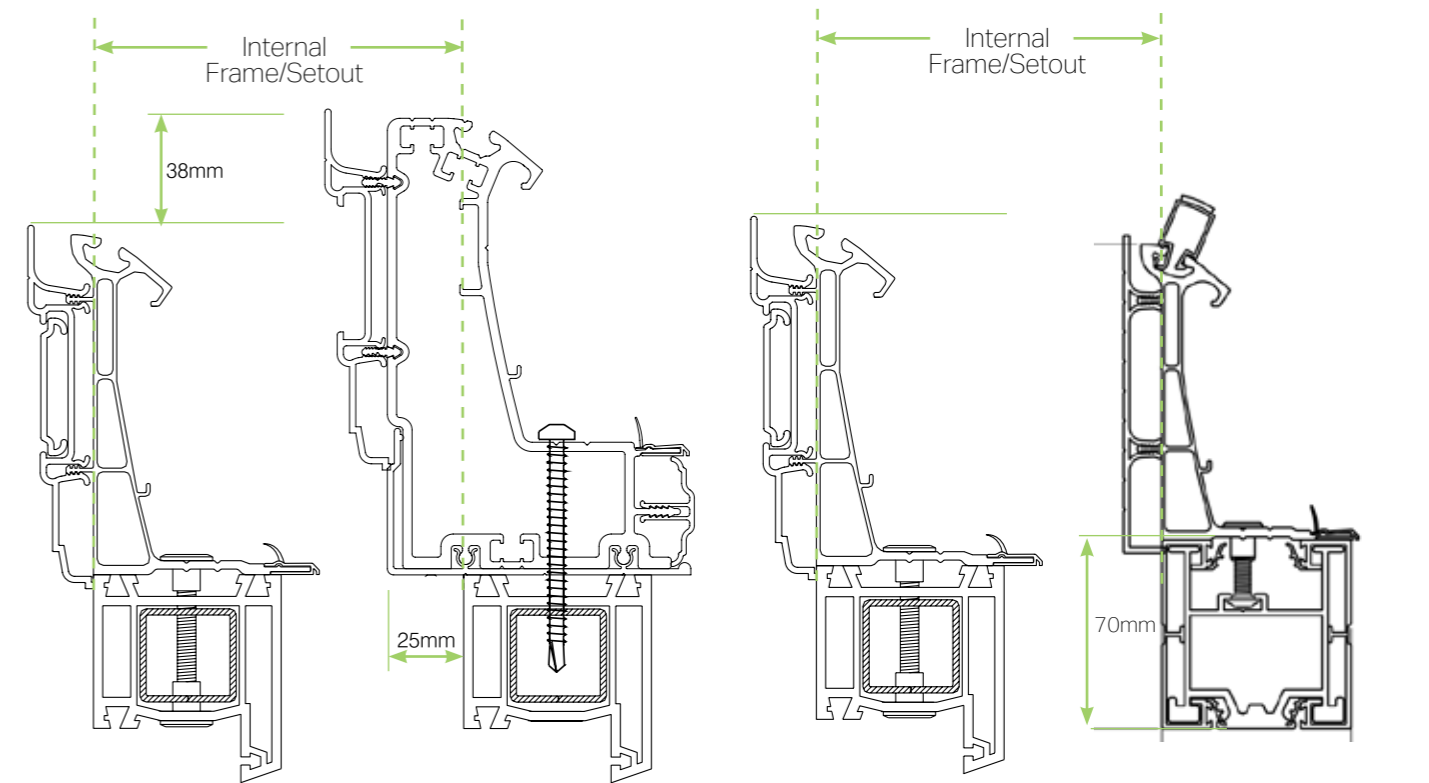


Standard Eaves Beam - illustrated with Ultraframe's recommended means of installation, the vic fixing kit (supplied)

Super Duty Eaves Beam - vic fixing kit is not suitable in this application

Standard Eaves Beam

Bi-fold Support Beam

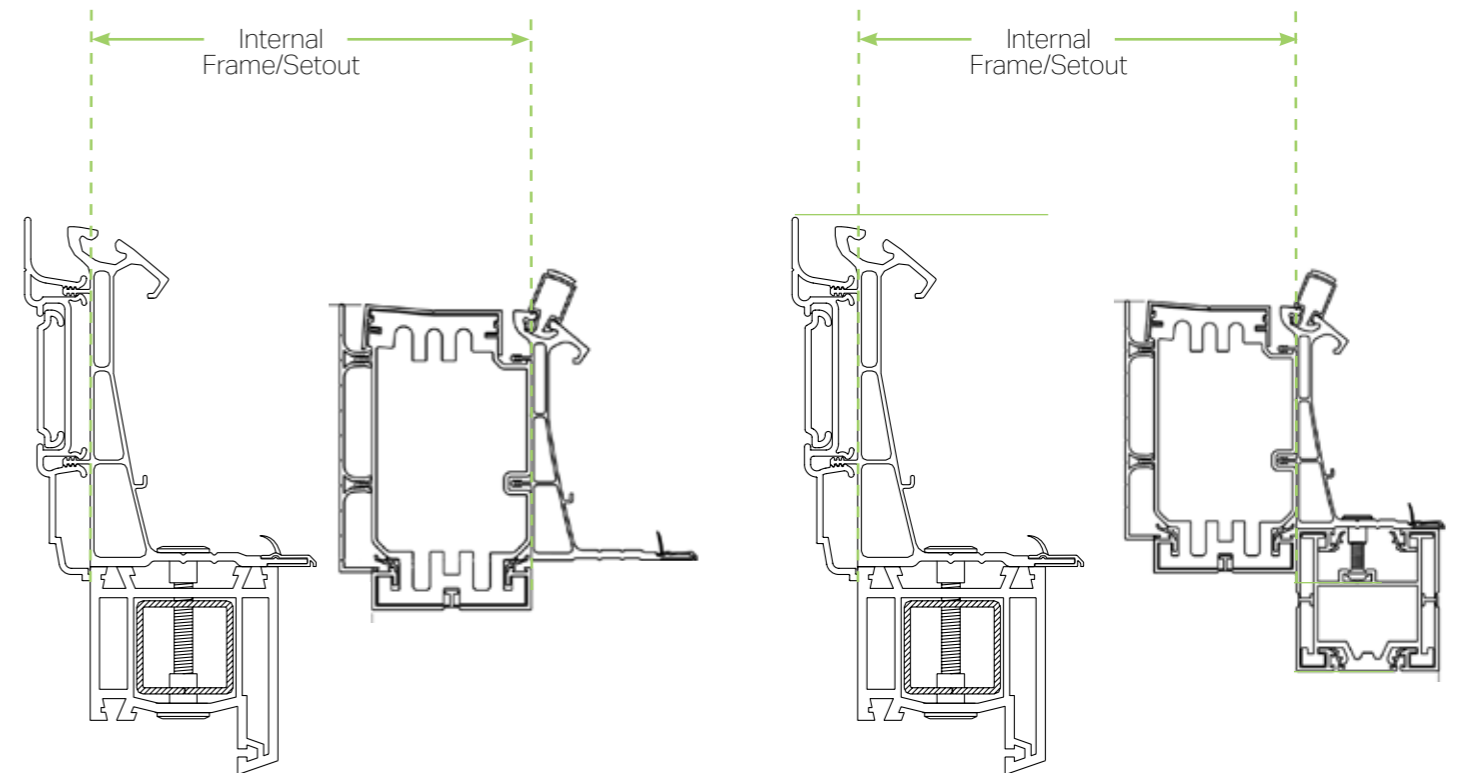

Standard Eaves Beam

Eaves Super Bolster

Standard Eaves Beam

Combined Bolstered Eaves

Section 5

DESIGNING THE ULTRAFRAME ROOF

Gutter Outlet

Option 1.

On survey check that the salesperson has agreed with the customer where they wish the conservatory roof to discharge from and drain to before designing the frames. Available L/H or R/H is the standard option supplied unless any other option is specified. The rainwater pipe is dropped down the house wall, kept clear of any opening vents in the side of the conservatory. LH is MS0001 - RH is MS0002.

Option 2.



L/H is SSG0002L - R/H is SSG0002R keeps the rainwater pipe tight into the corner. However, consideration should be made for packing the frames away from the wall so that the pipe is clear of the glass line or opening vents.

Option 3.

SSG0001 running outlet can be used in any position. However, consideration should be made for the rainwater pipe (65mm wide) when designing the frames to keep it clear of the glass line or opening vents.

Option 4.

Drill and fix outlet. Can be fixed in any position - requires only 40mm outlet pipe - MGO001. Recommended only as a last resort as limited outlet can easily be blocked by debris, leaves etc.

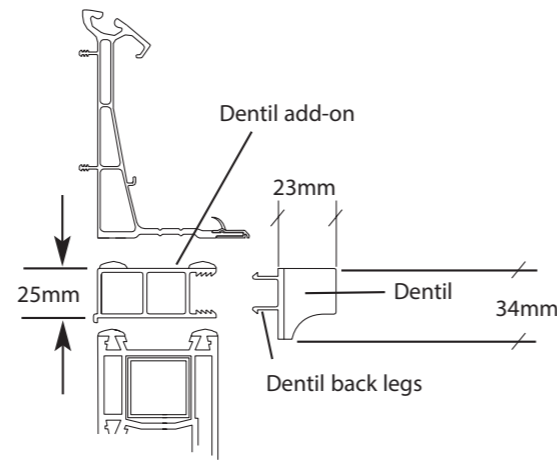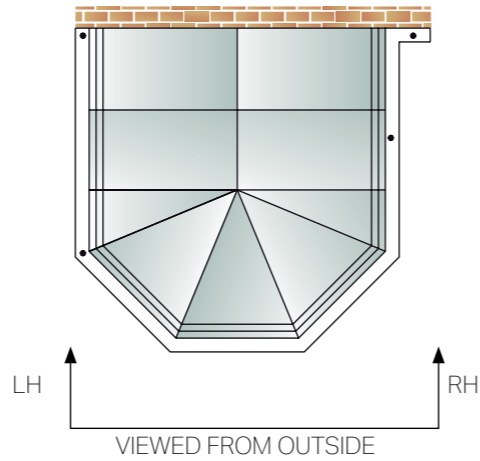

Dentil Moulding - optional

When specifying dentil moulding, allow 25mm for the dentil add-on section. Alternatively the dentil can be supplied without the back legs and add-on section if your frame is deep enough to accommodate the dentil fitted directly (with adhesive).

Box Gutter

When specifying a box gutter this is indicated on the roof plan as diagram A).

Diagram A



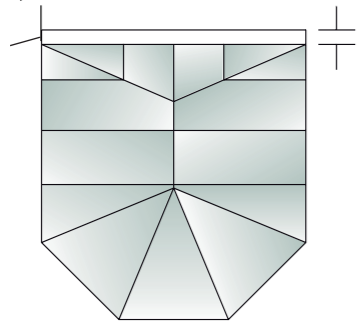


Diagram B

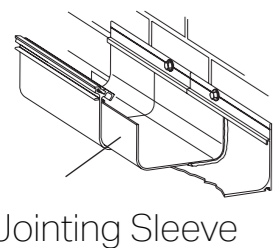

Extruded Box gutters

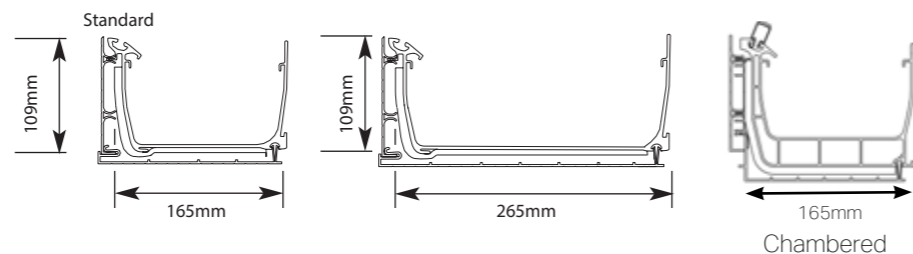

IMPORTANT:

The standard or chambered box gutter is 165mm wide (for use when collecting from a single roof). The 265mm wide box gutter is used to give extra capacity when collecting from two roofs eg. bungalow situations etc.

Special box gutters such as 'L' shape, 'U' shape, raised back or elevated are available to order. Large box gutters may have a mechanical joint to aid transportation as diagram B - jointing sleeve).

It is advisable to support such box gutters under the joint with a gallows bracket, pole (ie. a corner post) or brick pier. Always indicate the preferred position of joint so that any bracket does not foul with patio doors or windows.

Section 5

DESIGNING THE ULTRAFRAME ROOF

Box gutter situation to AVOID (if possible) & cost effective solution

Diagram D) shows the dwarf wall built off the corner of a projecting part of the building. The resulting roof requires a special "raised back" 'L' shape box gutter. This is more expensive, takes longer to install and is unsightly.

Diagram E) shows a more cost effective way for this situation which requires a standard box gutter.

The box gutter is connected to the standard guttering around the conservatory with a box gutter adaptor. There is a range of 14 adaptors with or without outlets. Box gutters are available with an outlet welded into the box gutter itself. This option should be clearly indicated on the roof plan with the exact position of the outlet required.

Building a 65mm offset into the dwarf wall allows a standard 165mm box gutter to be used. When the conservatory comes off the projecting building at 135°, an offset is still used but the dimension on the face brickwork changes to 123mm. (See diagram F) If 150° the offset is 108mm (See diagram G)

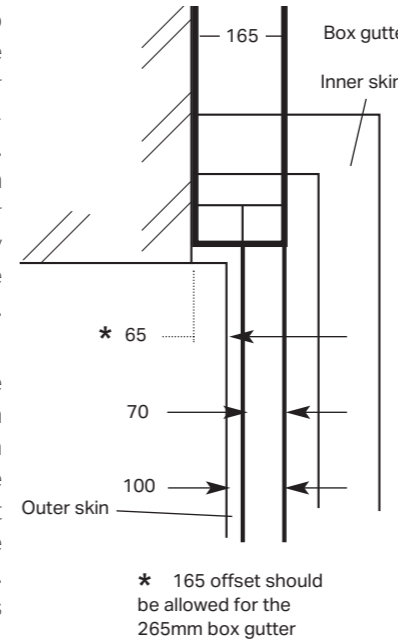


Diagram D

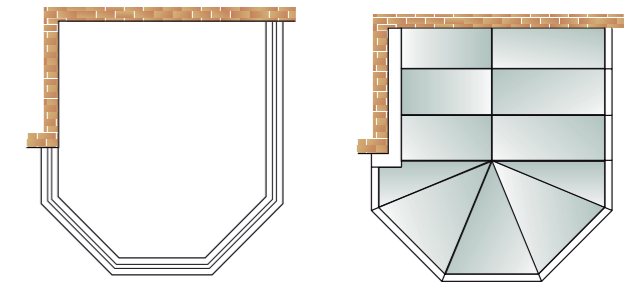


Diagram E

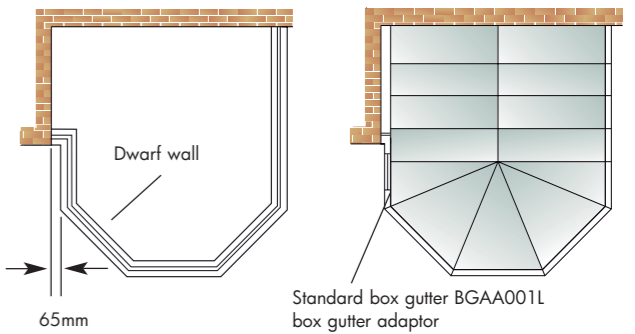


Diagram F



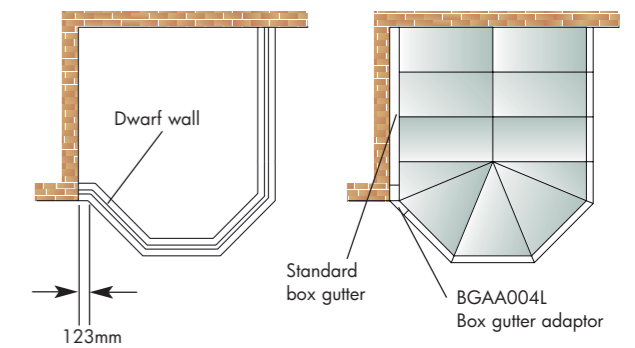


Diagram G

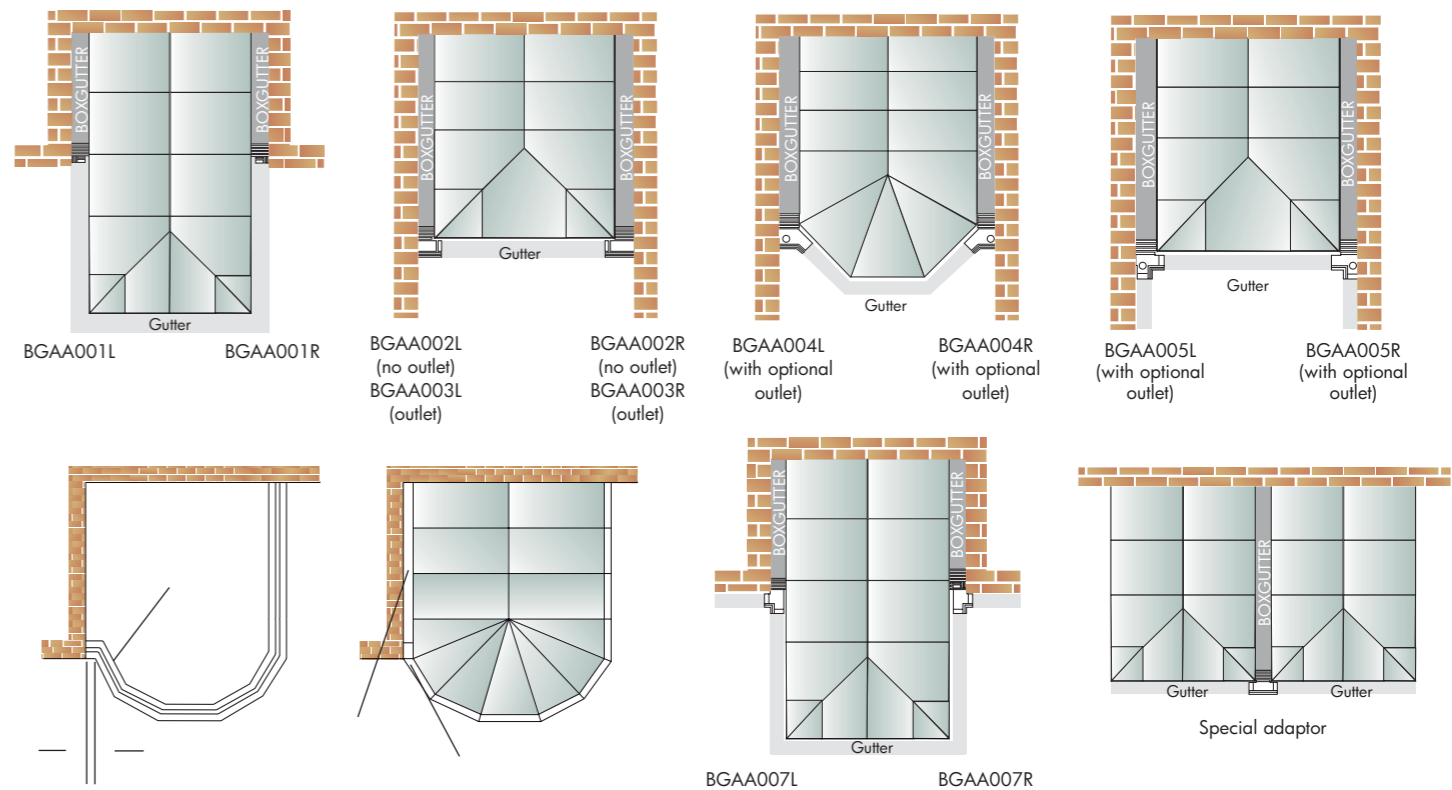

ALL box gutters (especially those with tie bars or joints) MUST be supported.

Ultraframe recommends several types of support for box gutters including brick piers. Fitting a conservatory box gutter without adequate support will lead to structural failure. Please take the correct steps BEFORE installation.

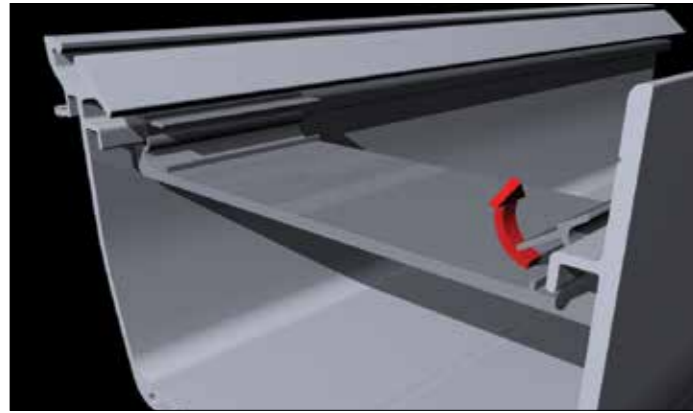

Box Gutter Strap

165mm box gutters

These are supplied loose and MUST BE FITTED – they are a structural requirement of the roof. The straps must be installed within 75mm of glazing bar centres (when measured from centre of the strap to the centre of the bar). To install these straps, simply `nip up` as shown.

265mm/special box gutters

Straps are factory welded into position.



Box Gutter Hanger

165mm box gutters


If these have been specified by your company at the time of order they are supplied loose and must be fitted.

The structural requirement for the hanging brackets are 2 x hanging brackets (sat side by side) at a maximum span of 2300mm unless the roof has a tie bar or joint on the box gutter which should then be positioned in the same area.

Drill through the head of the hanger into the centre of the masonry, avoiding the mortar joint if possible. Use a masonry anchor suitable for the substrate. Lead flashing should be dressed down over the hanger, and snipped around the sloped leg. To attach it to the box gutter, simply `nip up` as shown.

265mm box gutters

Hanger not available.

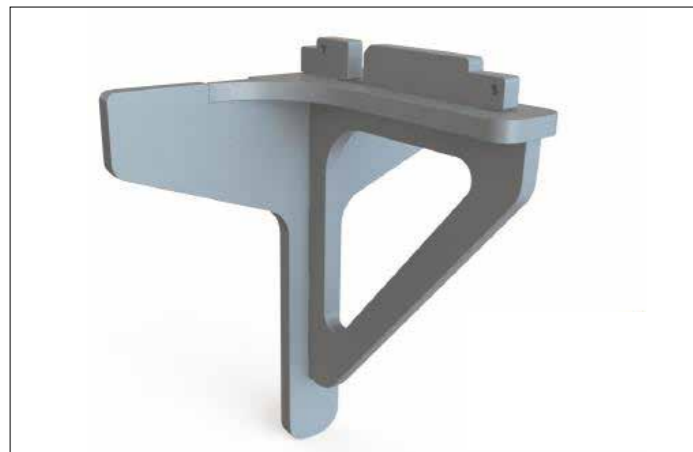

Gallows Bracket

These are available for 165/265 box gutters.

To install, notch out the insulation to ensure metal to metal contact between the extruded box gutter and gallows bracket. Offer up the gallows bracket and mark it ready to drill – always try to line up with the centre of a brick rather than a mortar joint. Drill the gallows bracket (the positions should be similar to the ones shown). Three masonry anchors should be used that are appropriate to the substrate.

Finally, notch out the undercladding, offer it into position and clip in.

Maximum centres are 2300mm. If the roof has a tie bar installed or a joint within the box gutter, then a gallows a gallows bracket should be installed directly underneath it.

There are three types of Bolstered Gallows Bracket, and these are all used where there is a raised back box gutter.

Hip

Hip bars (without a tie bar at final point) are under compression (at the bottom they are pushing on the box gutter) When the box gutter is raised back the hip bar does not strike through the corner but sits on top of the plate. The plate is not strong enough to support this load, so the Bolstered gallows bracket is used and the hip bar is fixed to the top of it with 4 No M6 bolts

Transom Tie Bar Support

Where a Tie Bar hits a raised back box gutter; the plate on the box gutter requires support. Transom bars connected by tie bars act as a truss and produce a concentrated point load at their location. Occasionally we can use two hanging brackets, but predominantly we use bolstered gallows brackets to support this load. Please note where the tie bar is more than a quarter way up the glazing bar; the tie bar bracket has to be fixed to the gallows bracket and not the glazing bar.

Beam Tie Bar support

Is it not always possible to place a bolstered gallows bracket directly under the transom tie bar, due to window/door openings. Where this occurs two gallows brackets are placed either side of the opening and a beam is joined to the top of these brackets. This beam distributes the concentrated load (from the tie bar) to these gallows brackets. This design is sometimes used on box gutters that rise above 500mm, to provide support to the plate.

Custom designed gallows brackets are sometimes required



DESIGNING THE ULTRAFRAME ROOF

Ridge

When a roof height is specified on an Ultraframe quotation or confirmation, this is measured from the underside of the eaves beam (top of your window frames) to the top of the ridge capping (excluding crests and flashing trim) as in diagram B).

Unless otherwise stated, the standard roof pitch is 25°. However, Victorian roofs can be manufactured from 15° to 40° in 5° increments if required.

When calculating a roof height where a height restriction exists, allow 50mm for the flashing trim (diagram C) and sufficient room for the flashing itself, 100mm min.

The crestings and finials are higher than the flashing trim (see diagram D), but this is not normally critical when considering the height of the roof. Note: Be aware of outward opening windows above, especially side hung.

Diagram B - Classic Ridge

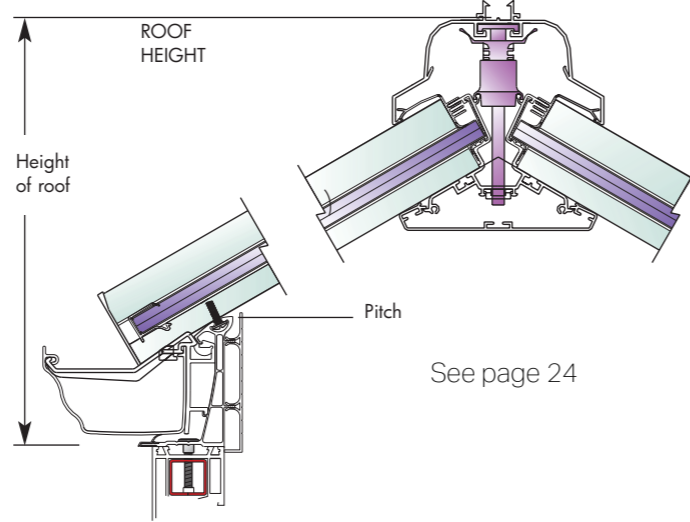


Diagram B - Slimline Ridge

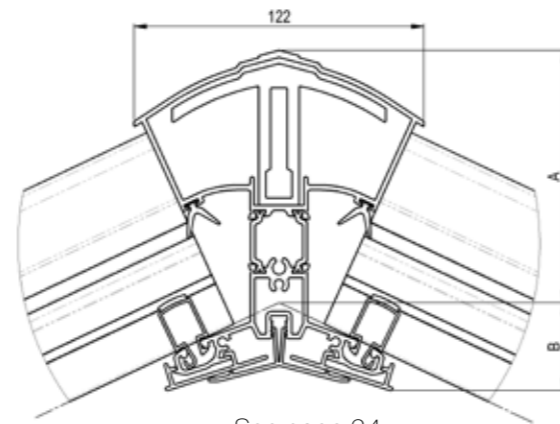


Diagram C - Flashing Trim



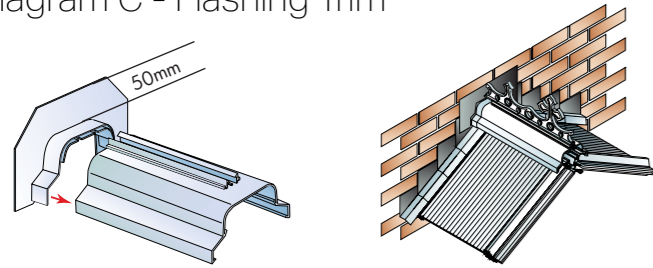


Diagram D - PVC Crestings and Finials

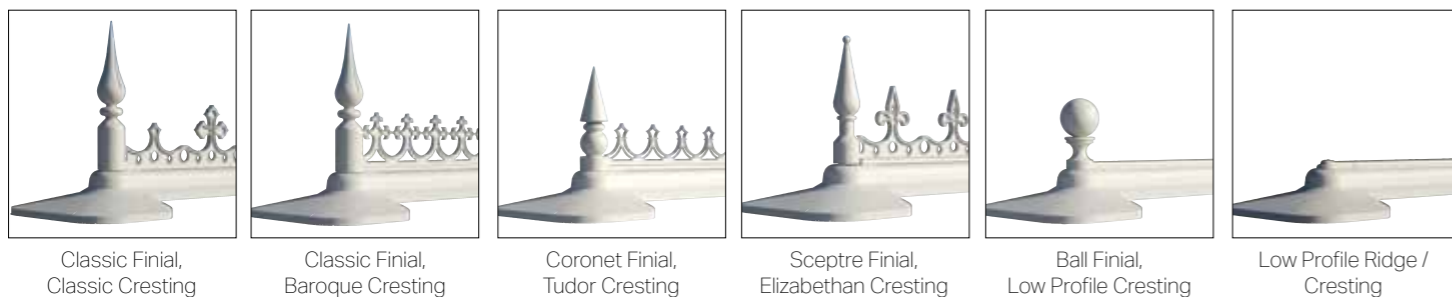

Technical Specification

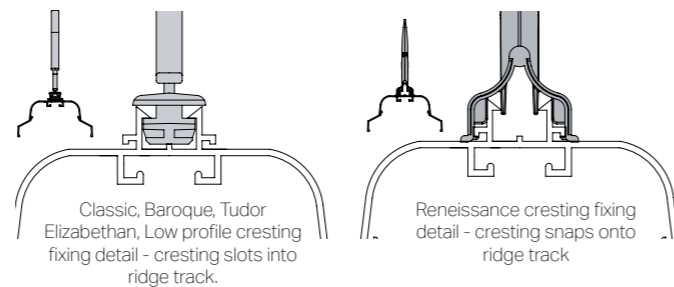


DESIGNING THE ULTRAFRAME ROOF

Ridge Length Calculations


When a ridge length is specified this is measured from the end of the ridge nearest the wall to the finial point, or from finial point to finial point in the case of a double ended ridge. It is not normally necessary to state the ridge length when ordering a complete roof as Ultraframe will calculate this. It is Ultraframe's policy to make the ridge length so that the pitch of the roof is equal on all facets wherever possible as in diagram E).

Diagram E

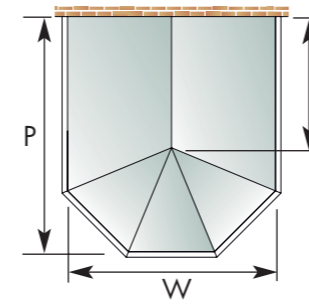


$$L = P \cdot \frac{1}{2}W$$

Diagram F

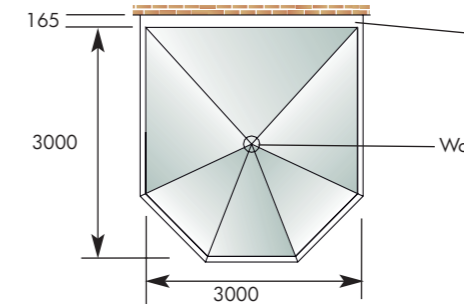

RIDGE LENGTH = ZERO

Diagram G

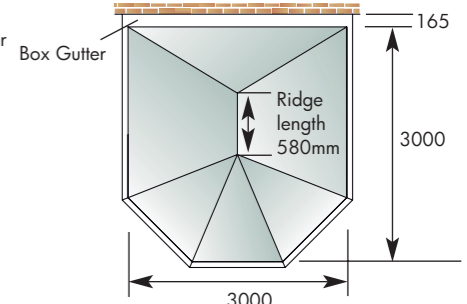

In the case of a double ended roof as in diagram F) the theoretical ridge length may be zero or even a negative number. This is when normally a 'wok' would be used instead of a ridge. However, if a ridge is preferred this should be specified.

The ideal minimum double ended ridge is 580mm (this allows one complete length of cresting between the finials). It should be noted that when a ridge is made longer than its theoretical length, then the pitch will be greater on one or both of the radius ends than on the sides, as per diagram G).

In line ridge to half ridge setting out

When surveying/setting out for this on a similar style of conservatory the following detail should be considered where the ridge joins the half ridge.

In order for the internal claddings and external cappings to line up, the centre line of the main ridge should be 32mm off the corner of the building (diagram B). Therefore, when setting out the base and dwarf walls, this offset should be included in the base dimensions (diagram C).

Diagram A

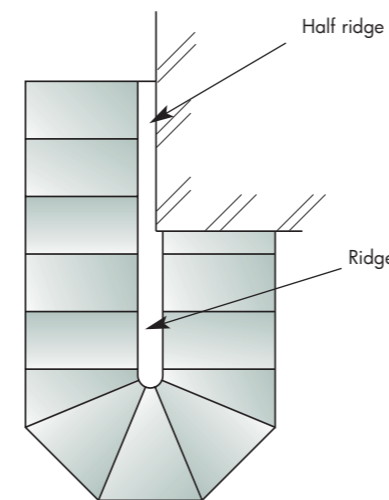


Diagram B


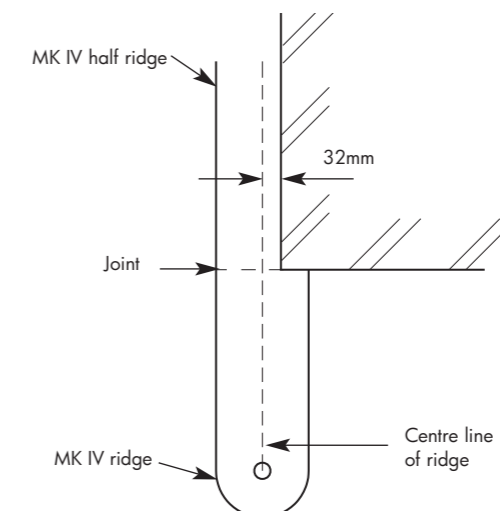


Diagram C

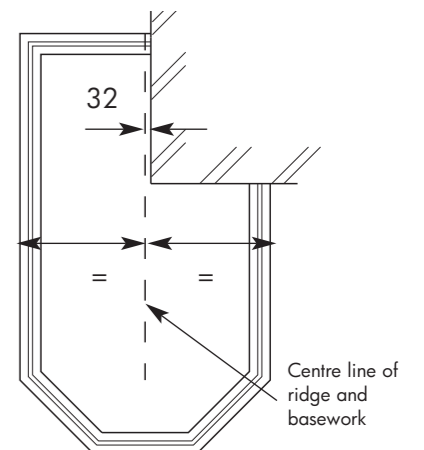


Section 5

Section 5

DESIGNING THE ULTRAFRAME ROOF


Classic Ridge Height Calculation

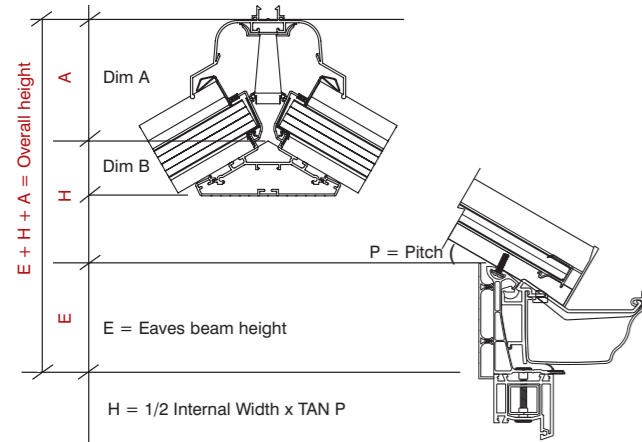

RIDGE HEIGHT CALCULATION			
P= PITCH	DIMENSION A	E= EAVES HEIGHT	DIMENSION B
15	154	109	44
20	148	109	48
25	142	109	56
30	136	110	61
35	130	110	71
40	124	110	81

EAVES HEIGHT + 1/2 INTERNAL WIDTH X TAN P + DIM A = OVERALL HEIGHT. *ADD 50MM RIDGE FLASHING TRIM


Half Ridge Height Calculation

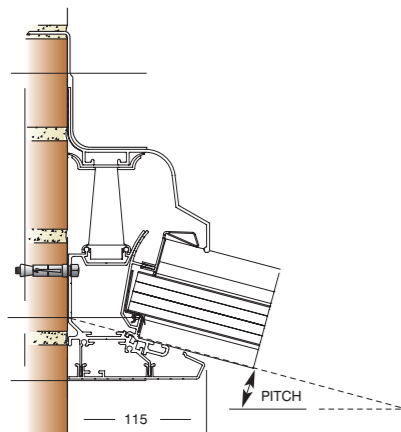

HALF RIDGE HEIGHT CALCULATION		
P=PITCH	DIMENSION A	DIMENSION B
5°	219	32
10°	209	41
15°	200	51
20°	190	60
25°	181	69
30°	171	79

EAVES HEIGHT + INTERNAL PROJECTION X TAN P + DIM A = OVERALL HEIGHT


Slimline Ridge Height Calculation

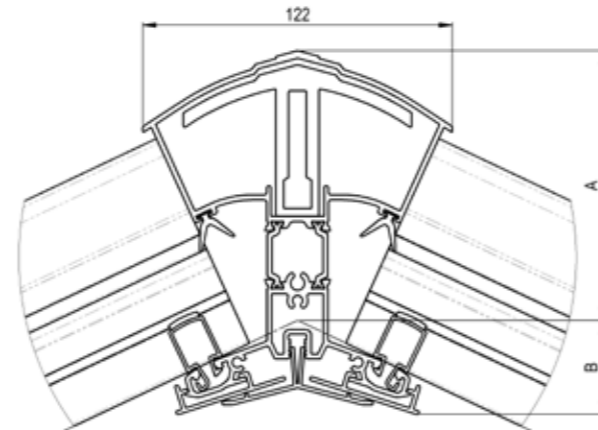

RIDGE HEIGHT CALCULATION			
P= PITCH	DIMENSION A	E= EAVES HEIGHT	DIMENSION B
25	105	109	37

EAVES HEIGHT + 1/2 INTERNAL WIDTH X TAN P + DIM A = OVERALL HEIGHT. *ADD 50MM RIDGE FLASHING TRIM

Lean-to Wallplate Calculation

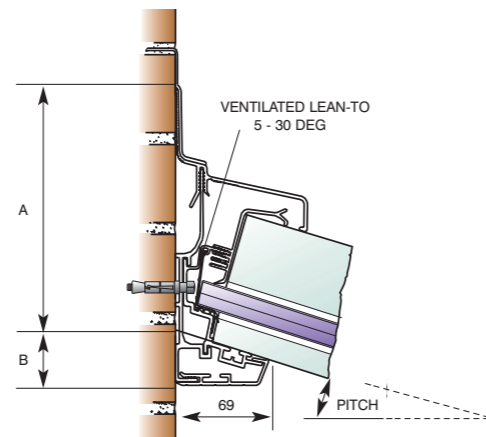

LEAN-TO WALL PLATE CALCULATION		
P=PITCH	DIMENSION A	DIMENSION B
5°	168	25
10°	161	32
15°	156	35
20°	153	41
25°	150	47
30°	145	54

EAVES HEIGHT + INTERNAL PROJECTION X TAN P + DIM A = OVERALL HEIGHT

DESIGNING THE ULTRAFRAME ROOF

Valley

Where the valley meets the eaves beam, the angle between the eaves beam sections should be 90° as shown in diagram A). The situation as shown in diagram B) should be avoided especially with glass roofs:-

Diagram A


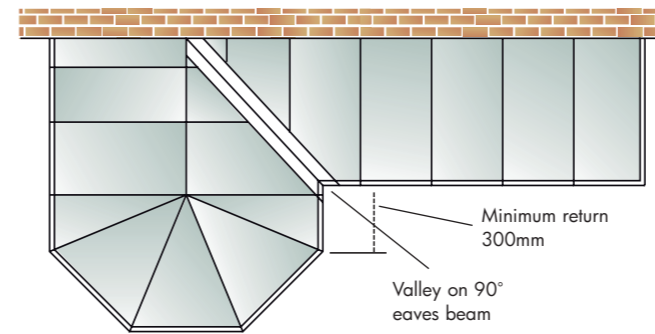


Diagram B

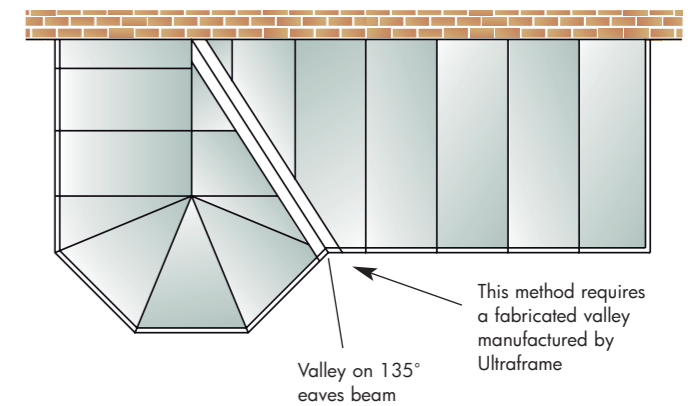

Structural action of tie bars.

Requirements for tie bars within a conservatory are dependent on several factors such as size, pitch, configuration, glazing and locality. The installation of a tie bar will limit this movement.

The ridge is propped by the glazing bars. This vertical load is transferred along the axis of the glazing bar and is known as an axial load.

The axial load is transferred to the eaves beam where it is useful to convert it into vertical and horizontal loads for simplicity. Using a tie bar, to tie together the glazing bars pulling in opposite directions, resists the horizontal load. Hence canceling out the horizontal loads.

This leaves the vertical load to be taken care of. It is recommended to situate the window frame mullions beneath the tie bars. Allowing the vertical load to be safely and directly transmitted to the dwarf wall and foundation. The eaves beam has been designed to span between mullions in cases where the glazing bars have not been lined up with the window mullions beneath.

It is also strongly recommended that tie bars are not positioned over opening double doors, as this will cause the eaves beam to deflect downwards. This will result in tie bar not being able to support the ridge at its correct level and therefore the ridge will deflect downwards by a similar amount. Depending on the weight and span of the roof, the span of the ridge (between tie bars or other vertical support such as existing walls) and position of a tie bar over double doors, the eaves beam will show noticeable deflection and snagging or jamming of the doors beneath.

In the case of Gable, or Duo pitch conservatories a Tie bar **must always** be positioned on the first glazing bar back. As the Gable frame is of a un-quantified strength and that given the fact that there is no direct connection between the frame and ridge section (other than a single bolt from the starter bar / end bar) the Tie bar on the immediate bar back minimizes any loads imparted on the gable frame and helps combat any deflection along the ridge length.

All tie bars recommended must be fitted prior to glazing (polycarbonate and glass). Failure to install tie bars or position them other than specified will compromise the structural integrity of the roof

DESIGNING THE ULTRAFRAME ROOF

Glazing Bar Spacing


When ordering the roof, it is not necessary to state the exact glazing bar spacing unless you are attempting to line up the glazing bars with the mullions of the frames below. When considering the glazing bar spacings, Ultraframe will attempt to space the bars equally wherever possible. It is generally accepted that equal spacings look aesthetically better even when the bars may not line up with the frames below.

Glazing Options

Another consideration when designing the glazing bar layout is Jack Rafters versus Splayed Bars. Sometimes the overall dimensions of the roof will create the need for staggered jack rafters as in diagram A). Splayed glazing bars (as in Diagram B) may be preferred to staggered jack rafters

The Classic system will accommodate different glazing materials, ie: polycarbonate or double glazed units and different glazing thicknesses of 24, 25 and 35mm. It is important to state which material and which thickness is to be used.

When ordering a roof unglazed, it is important to state whether unglazed for polycarbonate or unglazed for glass

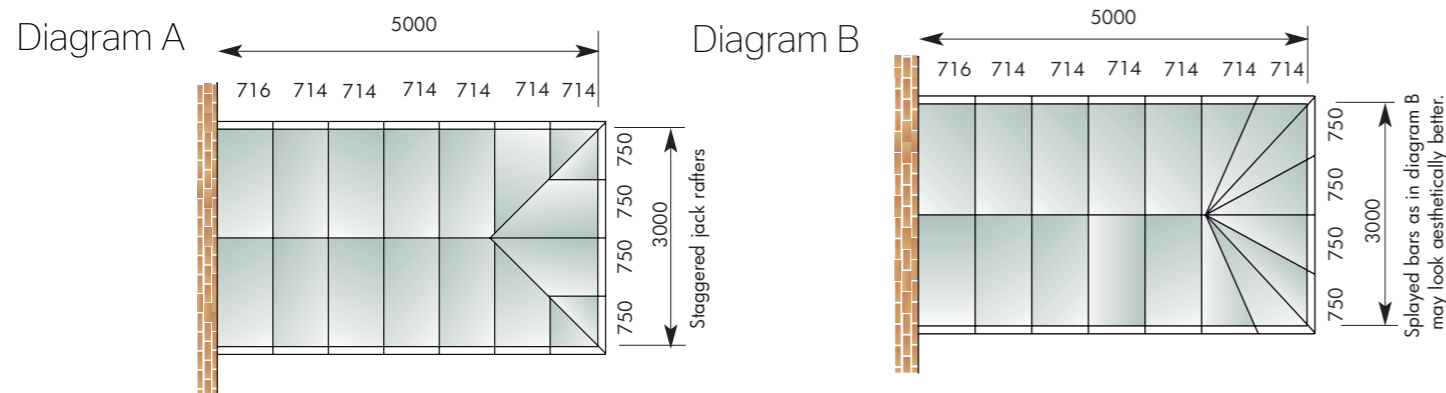

Tie Bar

When ordering a complete roof, Ultraframe will determine when a tie bar is required from a structural point of view. However, sometimes customers request a tie bar from an aesthetics point of view. If this is the case, please state on the order. Where the tie bar and ceiling fan clash use two vertical drop rods. See Diagram 'C'.

Gable Frame

Historically, when choosing a gable style conservatory roof, the front gable window frame sat directly onto the door frames. This was always a problem in that the doors below when "slammed to" created frame wobble above, which in turn affected the roof.



The introduction of the gable support beam creates a lintel between the frames which increases the structural and lateral stability substantially.

With a gable front conservatory the aluminium ridge body is cut to sit on top of the gable frame (supplied by you) so that the ridge body and external ridge capping finish flush with the external face of the frame. The internal ridge undercladding finishes flush with the internal face of the gable frame.

(See illus and dimensions opposite) to allow you to fabricate your gable frame prior to receiving your Glass Roof.

With a gable frame situation the end glazing bar (starter bar) fits directly onto the frame as shown.

Note: The furring top cap must be installed on top of the gable frame prior to fixing to the starter bar.

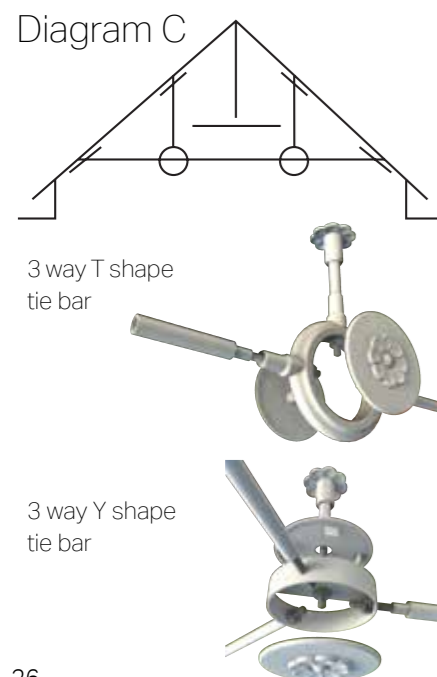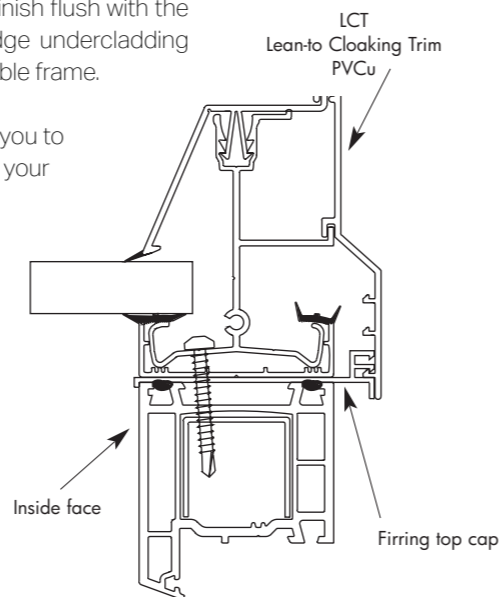

TIE BAR REPLACEMENT KIT (TBRK)

Tie bar replacement Kit TBRK


The introduction of the TBRK opens up new opportunities. Larger span conservatories that traditionally required tie bars to support the finial point may no longer be required. This innovation allows choice which was unavailable previously.

IMPORTANT: The option of using TBRK is very much dependent on the suitability of the host wall. On survey you must carefully inspect the condition of the house wall. Earlier in this guide you were asked to inspect the wall for hairline cracks etc. For TBRK to be successful on installation, the house wall must not show any signs of settlement, disturbance or flaking. It must be solid. For example TBRK will not be suitable against ship-lap cladding or vertical hanging tiled walls. Tie bars would have to be used in these circumstances. If the ridge of the conservatory strikes the house wall and is within 500mm of a window or door opening, then a tie bar should be used at the finial point. If tie bars cannot be used and you need to use TBRK, then consult Ultraframe for further advice. The condition and method of construction are key to a successful installation.

IMPORTANT: The use of TBRK will always be subject to final survey. Refer to the TBRK installation guide for recommended host wall fixings


For a successful installation of TBRK always

Ensure alignment of side frames

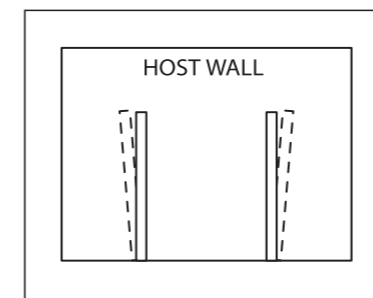


All frames **MUST** be installed plumb – any frames that are not will result in the ridge end dropping and the TBRK not working effectively.

Check the condition, strength and type of host/contact wall

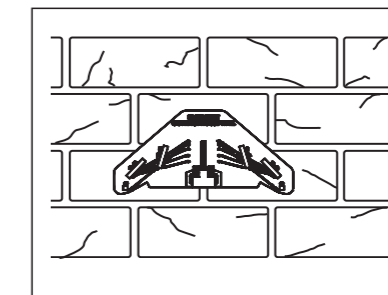


The TBRK **MUST** be installed against a sound wall e.g. of masonry construction and not shiplap boarding. Sleeve anchors are provided which cover most site installations. For hollow bricks or blocks resin bonded anchor bolts **MUST** be used (not supplied).

Fit 3 eaves to wall fixings

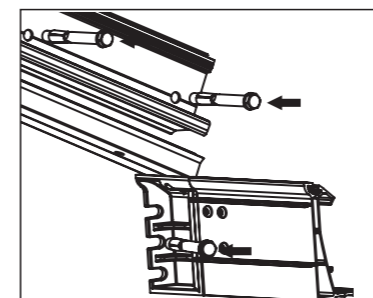


The eaves **MUST** be fastened to the host wall using 3 sleeve anchors – one through the aluminium eaves end moulding and two through the reinforced end of the starter bars.

Correctly Set the Ridge

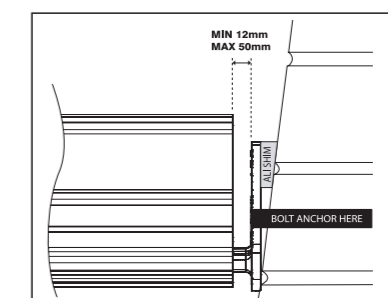


Ensure the ridge body sits on to the compression plate. If necessary use aluminium shims if the ridge compression plate requires packing behind. Ensure the ridge is level, prop it until all bars are installed. If necessary over compensate and lift the finial end of the ridge 10mm above level

Fit all cleats and straps

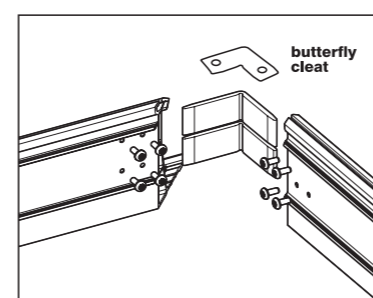

Ensure all cleats and straps are fitted as instructed, making sure there are no open joints.


Use the fixings provided

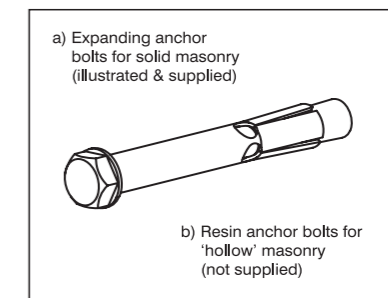


Use correct fixings, as instructed. All relevant fixings **MUST** be used

THE CLASSIC SYSTEM - SUPER DUTY EAVES

The Super Duty Eaves Beam should be specified where additional spanning performance is needed, allowing confident specification of folding/sliding doors (or indeed any type of opening such as in-line sliders).

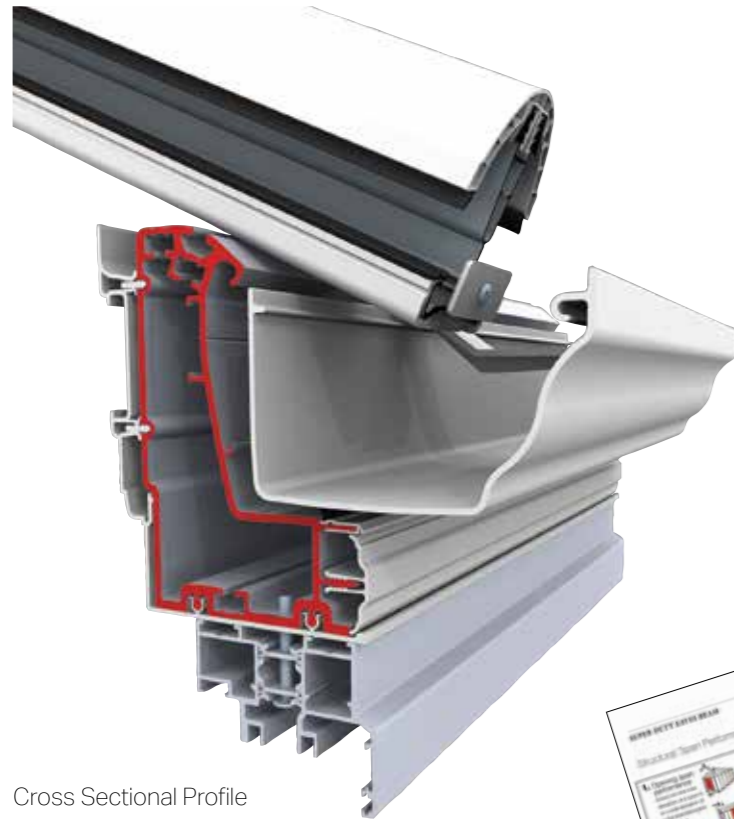


Cross Sectional Profile

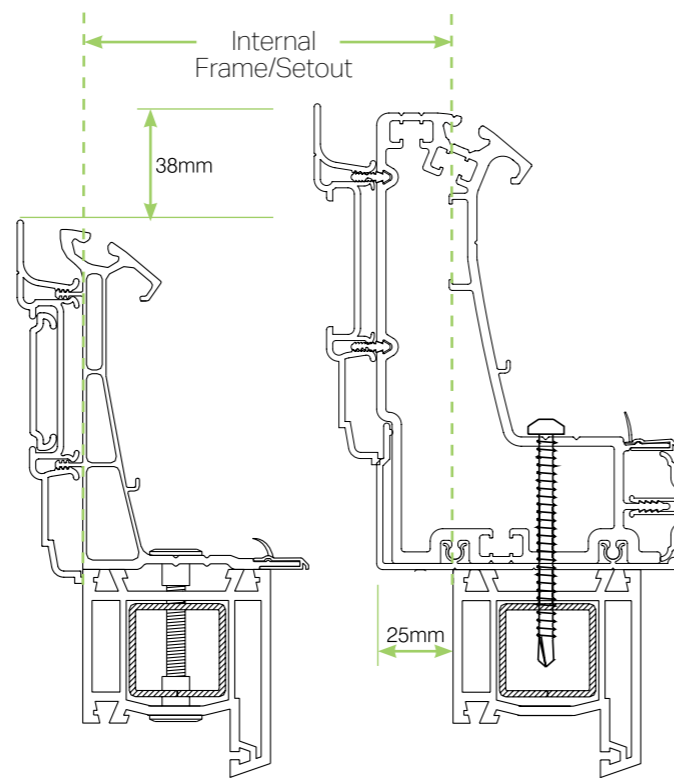

Standard Eaves Beam - illustrated with Ultraframe's recommended means of installation, the vic fixing kit (not supplied)

Super Duty Eaves Beam - vic fixing kit is not suitable in this application

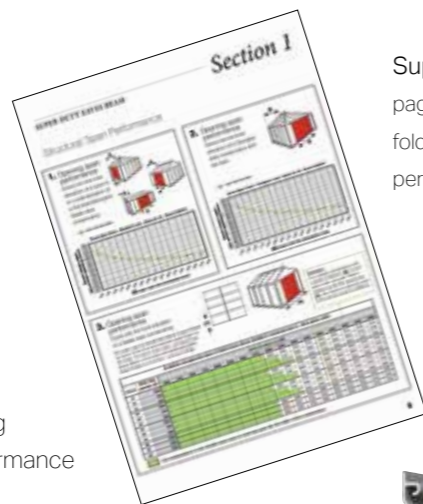

Super Duty Eaves Beam Charts - Refer to page 5 of the Super Duty Eave Beam & Aluminium folding/sliding doors Technology Guide for spanning performance.



If the loading conditions are more onerous than the Super Duty Eaves Beam can cater for, a goalpost arrangement is then specified

Technical Specification

Super Duty Eaves Beam

- Structural 'beefier' aluminium profile that uses existing PVC components to clad and cap for optimum performance
- Sits 38mm taller than the standard eaves beam (remember this when calculating overall ridge heights).
- Needs to be specified all the way round the nominated conservatory and NOT simply on the facet into which the doors are to be fitted.
- Readily interfaces with box gutters and Gable Support Beam, to offer maximum integration and configurability
- Ultraframe's span charts need to be studied carefully BEFORE conservatory selling and design starts... the elevation into which the doors are to be fitted, the style of conservatory and the 'span onto' dimension all affect the maximum allowable width of opening when using the Super Duty Eaves Beam.
- If a conservatory design requires an opening width greater than that which can be offered with the Super Duty Eaves beam, then a portal/goalpost arrangement will be needed – Ultraframe can provide a custom solution.


STRUCTURAL EAVES

Any of the structural eaves should be specified where additional spanning performance is needed, allowing confident specification of folding/sliding doors (or indeed any type of opening such as in-line sliders).

- 2 new structural bolstered profiles:
- Bi-fold support beam which mounts to the underside of the eaves.
- Eaves super bolster which mounts to the inside of the eaves beam.
- The 2 profiles can be used separately to bolster the eaves or combined to further increase the spanning capability.
- The bolster sections only need to be specified on the elevation where the larger opening is required.
- The bi-fold support beam is 70mm tall and runs between corner posts.
- The eaves super bolster support beam is 134mm tall.
- uPVC claddings on internal and external fascia.

On the elevations which do not require the spanning capability, either the frame height can be adjusted, or a standard frame add on or corner post profile can be used to pack the frames under the eaves.

Standard Eaves

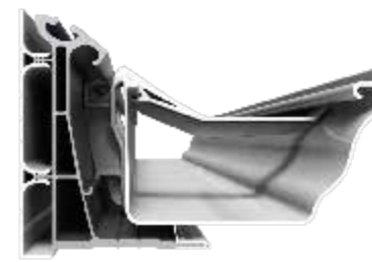

Super Duty Eaves



Bi-fold Support Beam



Eaves Super Bolster




GOALPOSTS STRUCTURAL GOAL POST

For larger unsupported spans for bi-fold and sliding doors, where a Super Duty Eaves or Eaves Bolster will not provide enough support, a goalpost will be required. Goalposts is designed to be used on a Georgian or Double Hipped Georgian, on any pitch and not limited to a 25 degree pitch. It will always need to be situated inside a pelmet and be specified with a cornice. To determine if you need an Goalposts Structural Goalpost please see span chart on page XX. The maximum possible span with an Goalposts Structural Goalpost is XX.

Please note: Goalposts cannot be used if an Eaves bolster (Bi-fold support beam, super bolster, combined bolster) is used on the roof.

1. Aluminium vertical post
2. Aluminium Horizontal Beam
3. Protective Adhesive Expanding Foam Tape
4. Aluminium L-Shaped header Bracket
5. Cornice under trim
6. Modesty Panel Factory Cut to Fit
7. Internal Pelmet Factory Cut to fit
8. Protective Adhesive Glazing Packer

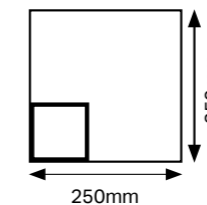


Footplates


Welded footplate supplied as standard.




Classic Eaves Span Chart - Standard Load - Glass (4/././4) - Snow 0.6kN/m²

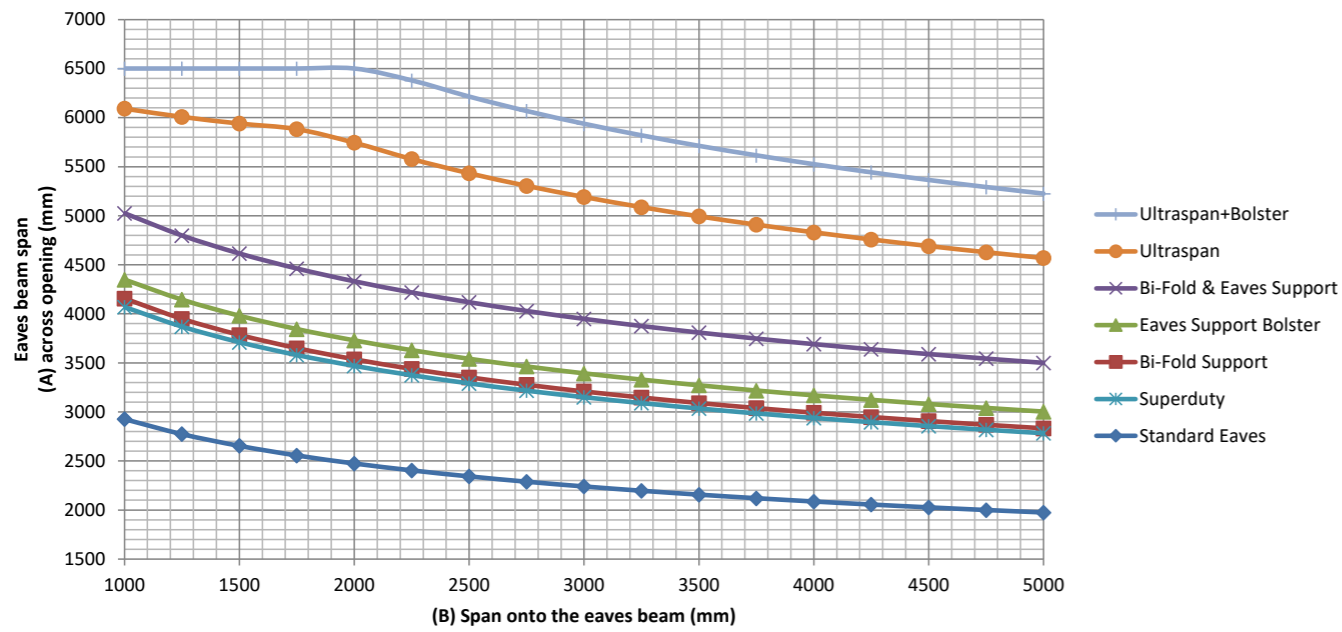


Opening span performance
Doors into the front elevation of a Lean to or a side elevation of a Victorian/Georgian/Gable style conservatory

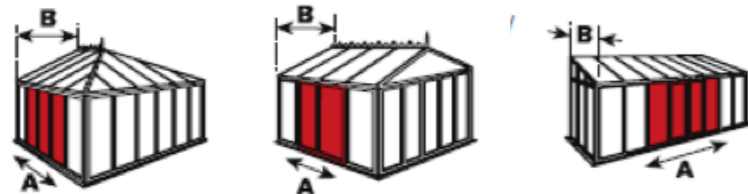

Classic Eaves Span Chart - Standard Load - Glass (4/././4) - Snow 0.6kN/m²

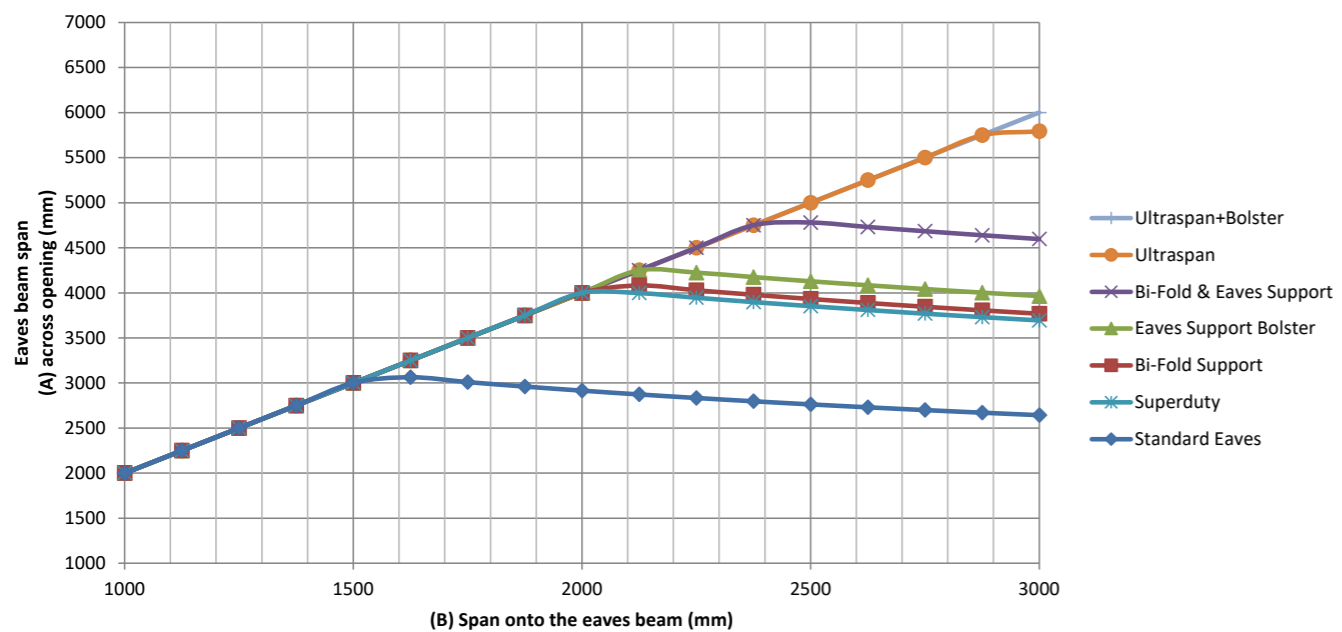


Opening span performance
Doors into the front elevation of a Georgian style conservatory with hip bars

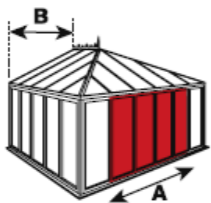

SPAN CHARTS

- Imposed Load = 0.6 kN/m².
- Roof pitches = 15° for monopitch, 25° for duopitch and hip/gable.
- 5mm of deflection under maximum load which must be confirmed as acceptable by bi fold door supplier. This information relates to bottom rolling Bi-Fold doors only (not top hung doors).
- Suitable lateral and vertical support must be provided within window/wall structure at the edge of the opening by the conservatory designer / retailer to support the eaves beam.
- Each elevation should be considered individually with particular attention being given to elevations that have over 80% openings since they may require additional structural measures.
- Ultraframe cannot accept responsibility for the overall stability of the conservatory unless a portal frame is supplied by Ultraframe.
- This chart is for guidance only. Udesign software designs to job specific parameters.
- Ultraspan and ULtraspan +Bolster are limited to 20mm total deflection.

Eaves Span Chart - Standard Load - Glass (4/././4) - Snow 0.6kN/m²

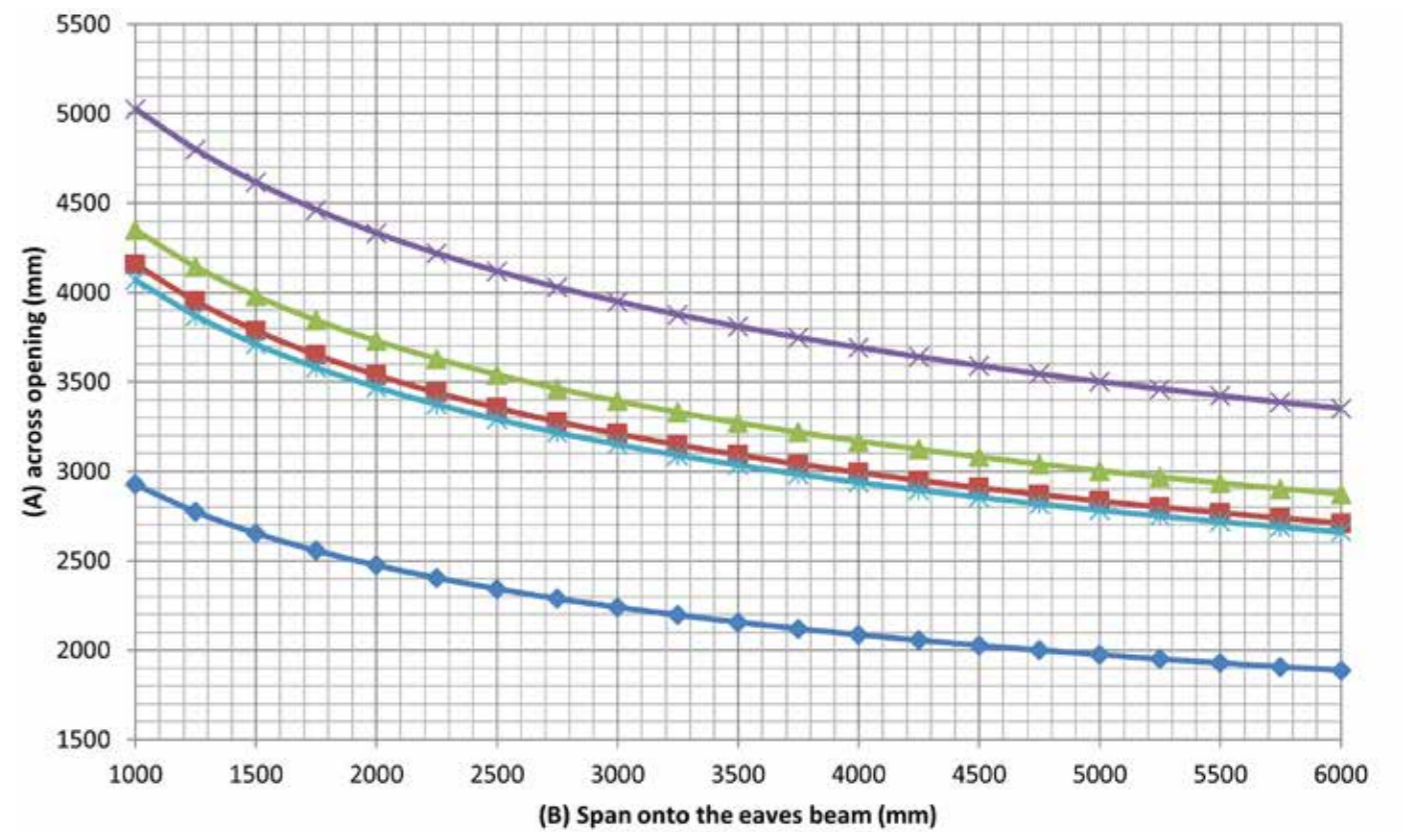


Key:

- Bi-Fold & Eaves Support
- Eaves Support Bolster
- Bi-Fold Support
- Superduty
- Standard Eaves

Opening span performance

- 1) Doors into the front elevation of a Lean.
- 2) Doors into the side of a georgian / victorian.
- 3) Doors into the side of a gable conservatory.
- 4) Doors into the front of a georgian (Note: dimension B is from finial point to internal face of front facet). For larger openings may be possible - contact Ultraframe Technical Support.

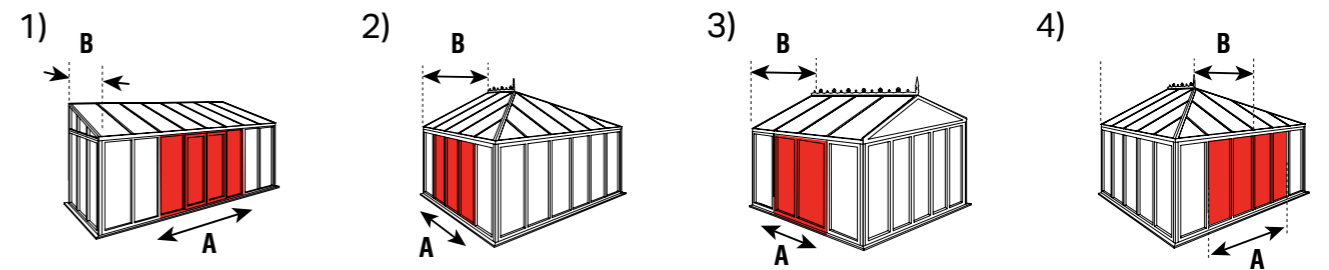


Section 6


Section 6

EAVES BEAM MEASUREMENTS


Standard Eaves Beam

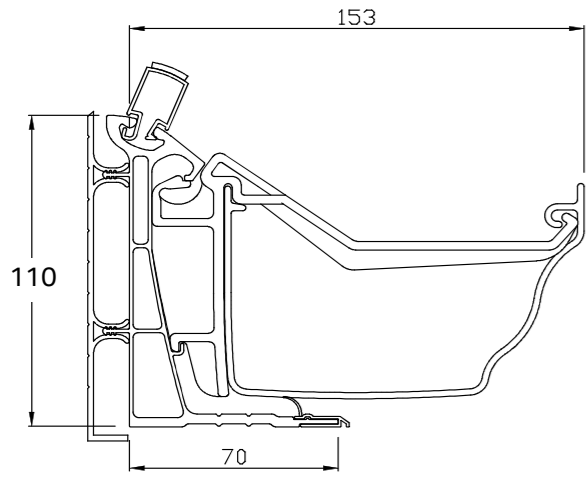


Super Duty Eaves Beam

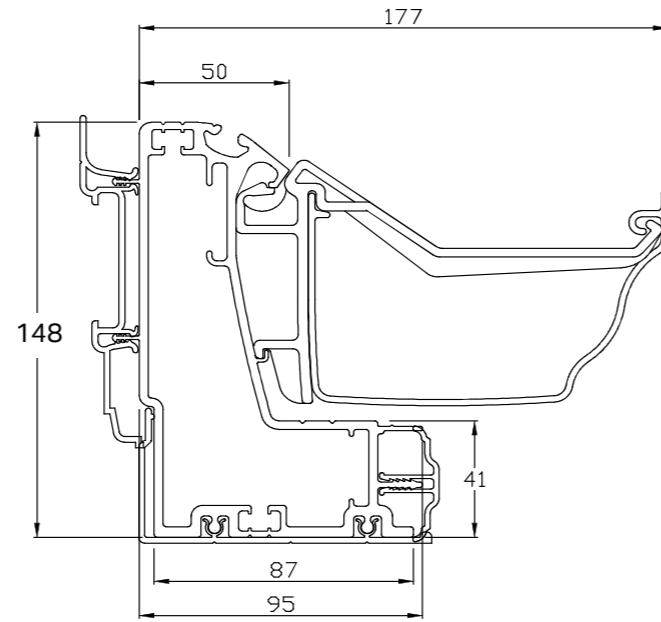


Combined Bolstered Eaves

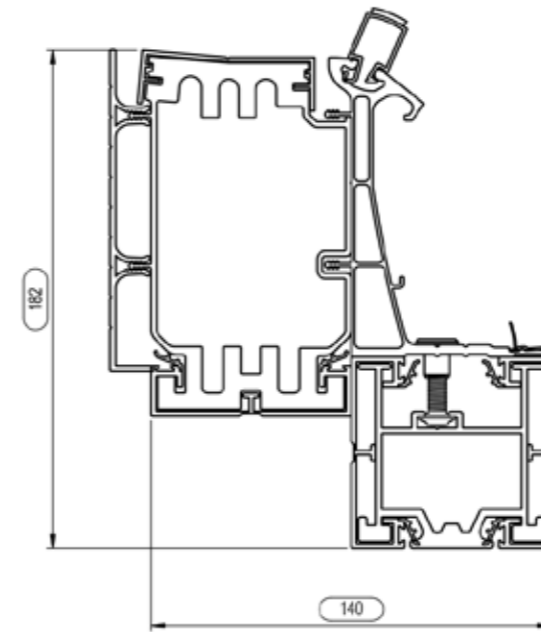


BI FOLD SUPPORT BEAM

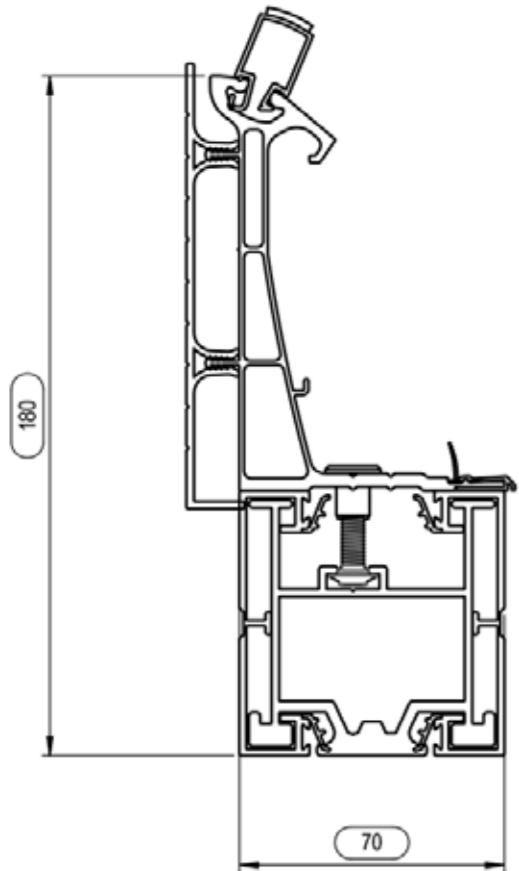

EAVES SUPER BOLSTER

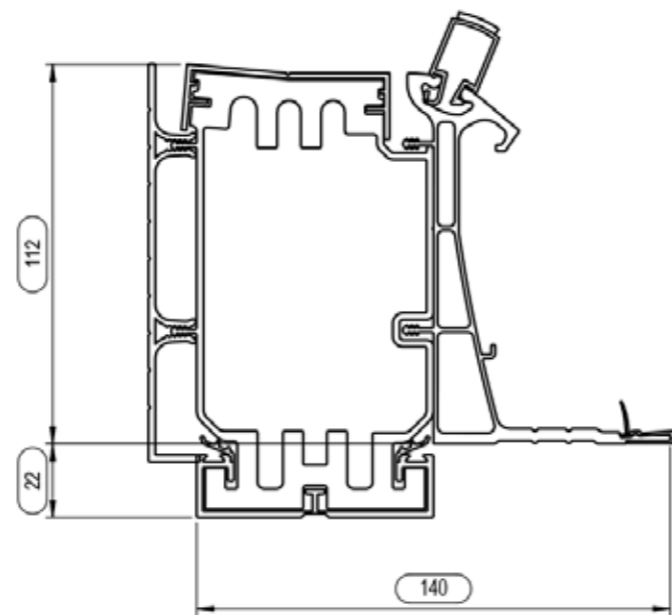


GABLE BEAM

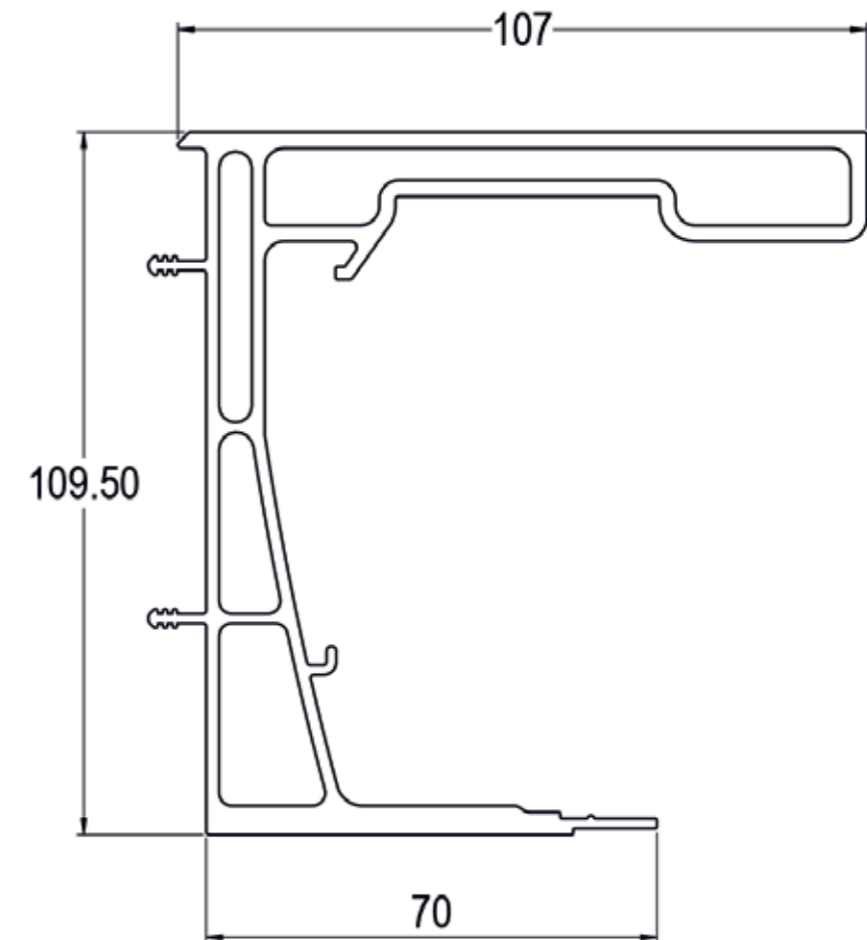


Section 6

BOX GUTTERS MEASUREMENTS


165mm

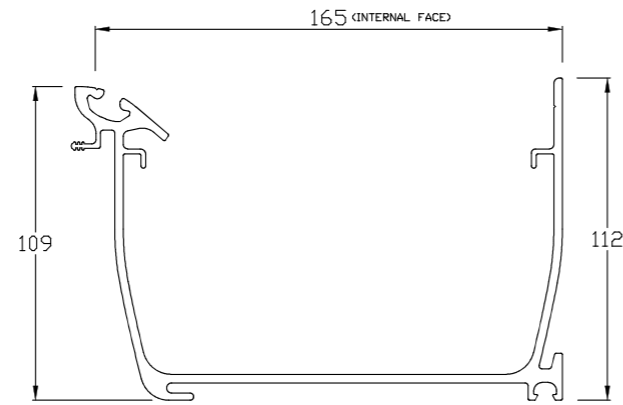

265mm

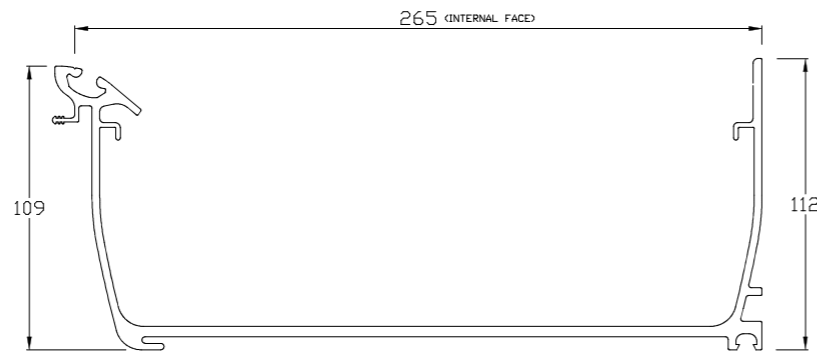


CHAMBERED BOX GUTTER

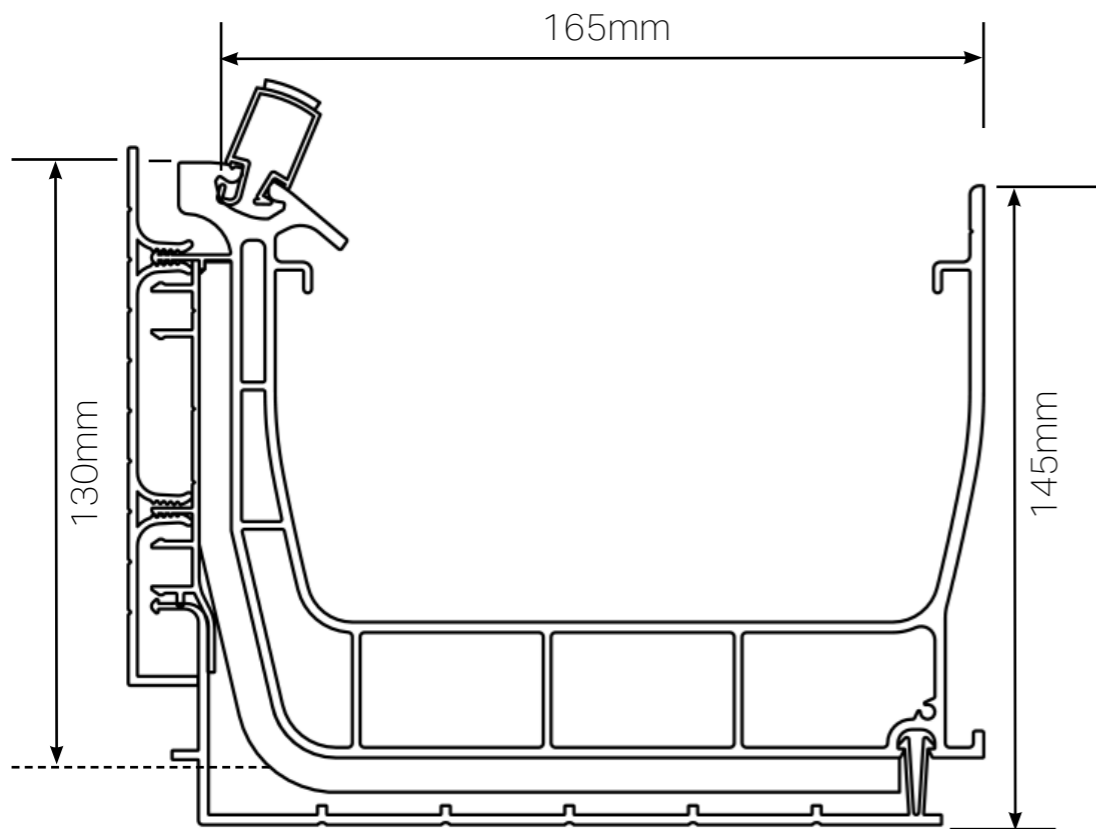


Section 6

GALLOWS / HANGING BRACKETS MEASUREMENTS


165 Gallows Bracket

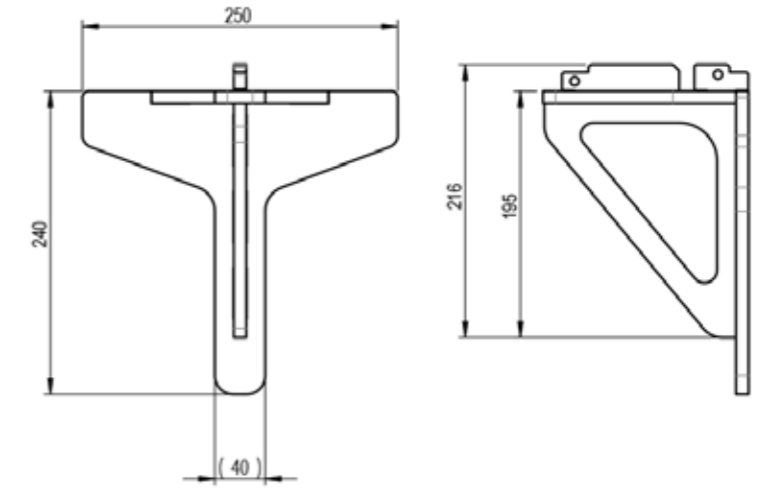

265 Gallows Bracket

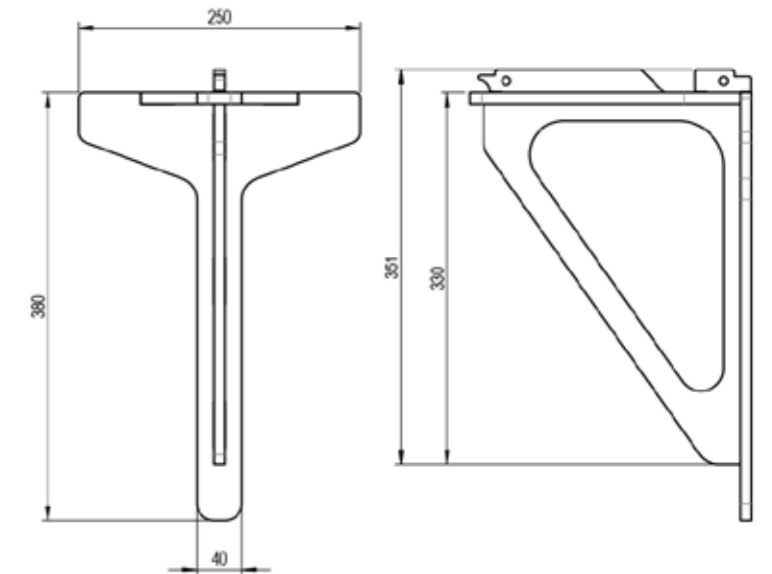


165 Hanging Bracket

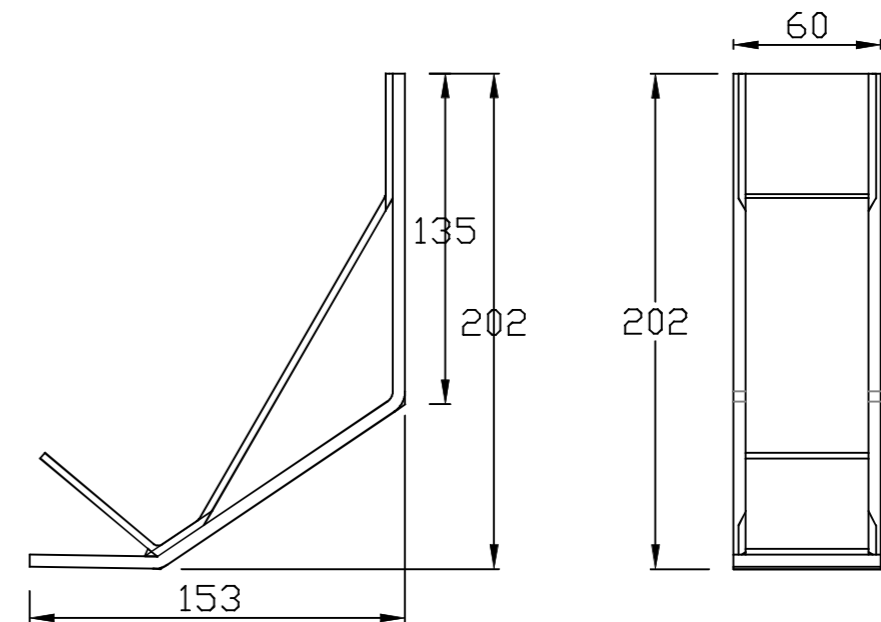


Section 6

CORNICE MEASUREMENTS


Standard Eaves Beam

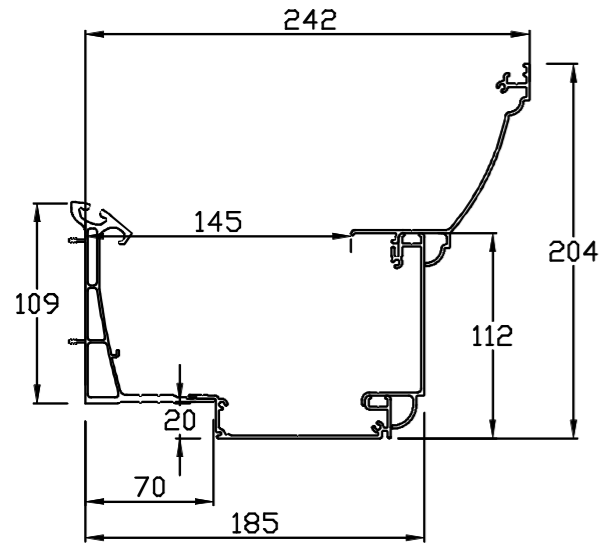


Super Duty Eaves Beam

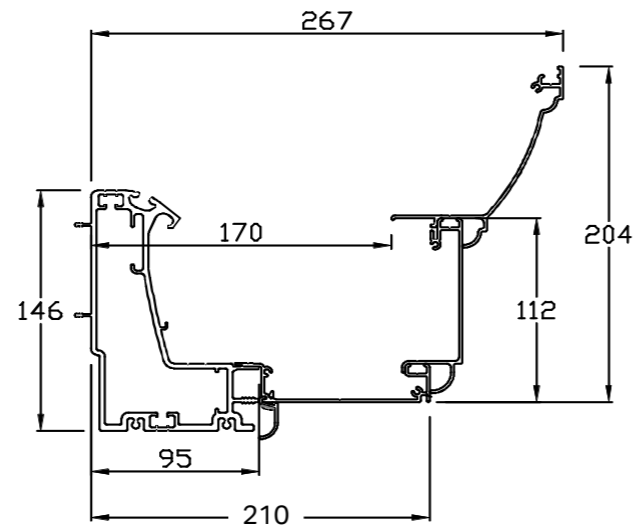

Curved cornice

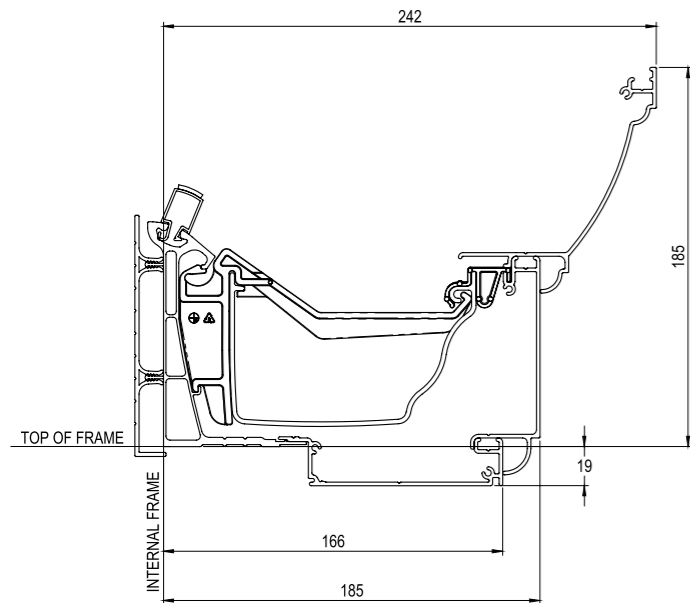

Flat fronted cornice

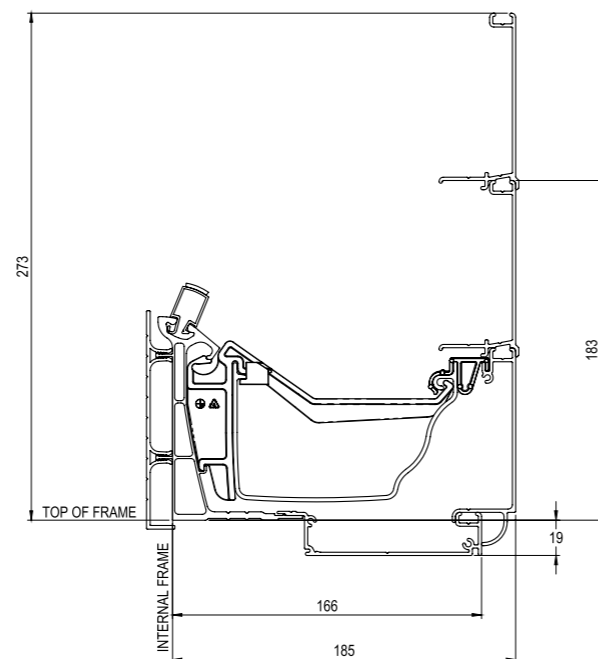


Section 6


INTERNAL PELMET MEASUREMENTS

The internal pelmet is available in internal soffit projections from 300mm to 1200mm (measured from internal frame). The product has 2 options, 'on fascia' and 'below fascia' (which requires a frame add on but allows the framework and plasterboard to go under the box gutter).


Standard eaves on fascia

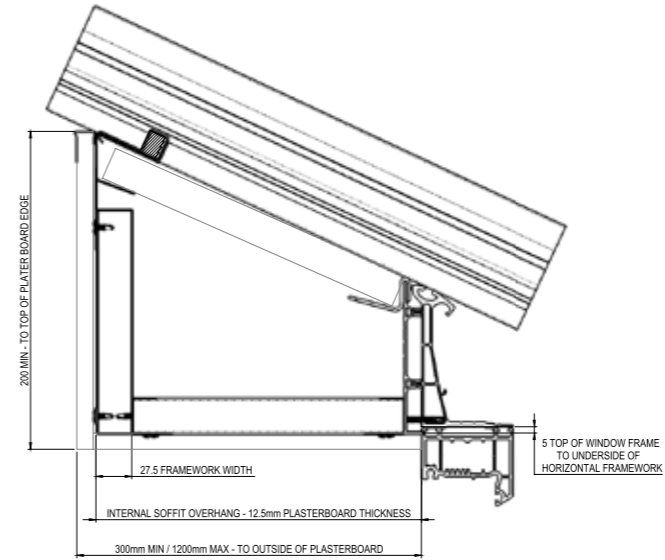


Standard eaves below fascia

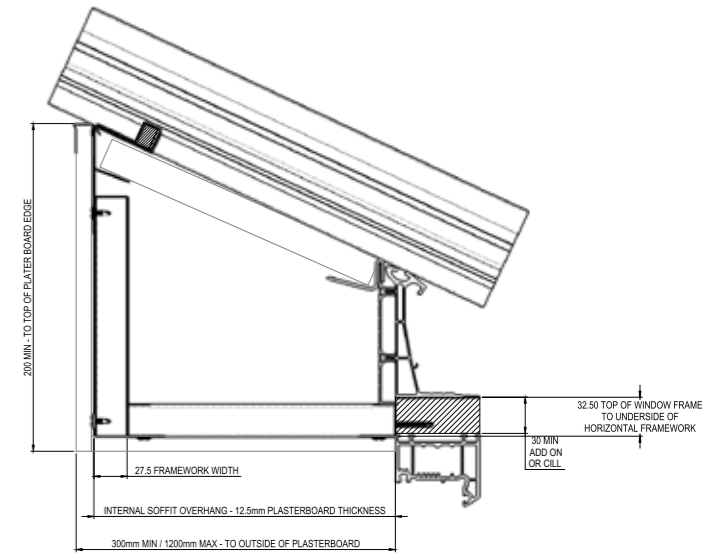

Box gutter on fascia

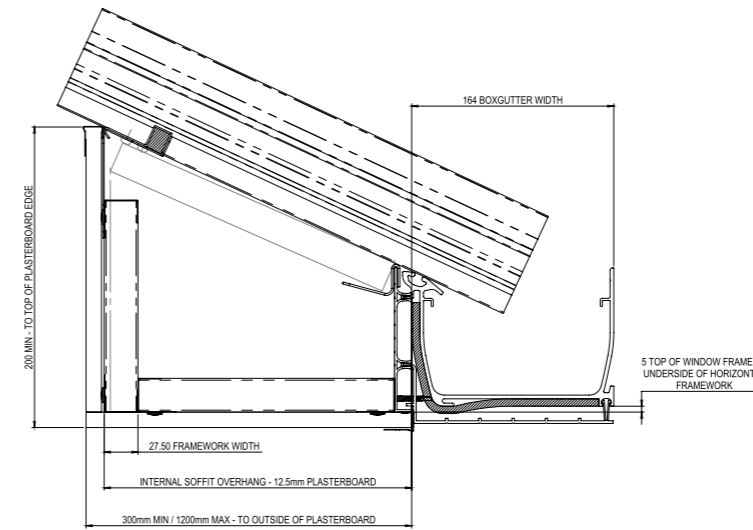


Box gutter below fascia

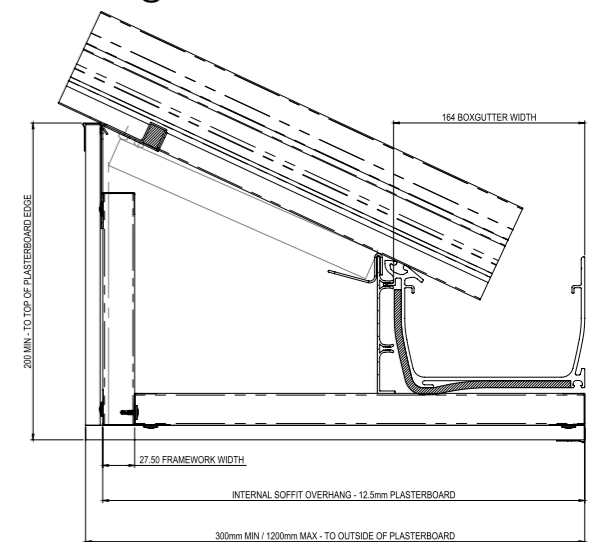


Section 6

RIDGE / WALLPLATES MEASUREMENTS


Mk5 Full Ridge

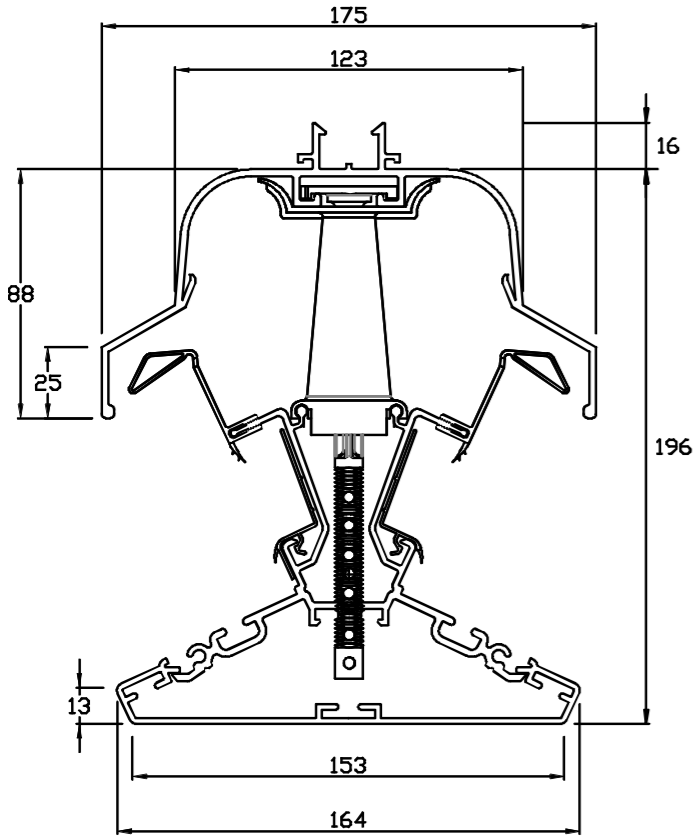


Mk5 Half Ridge

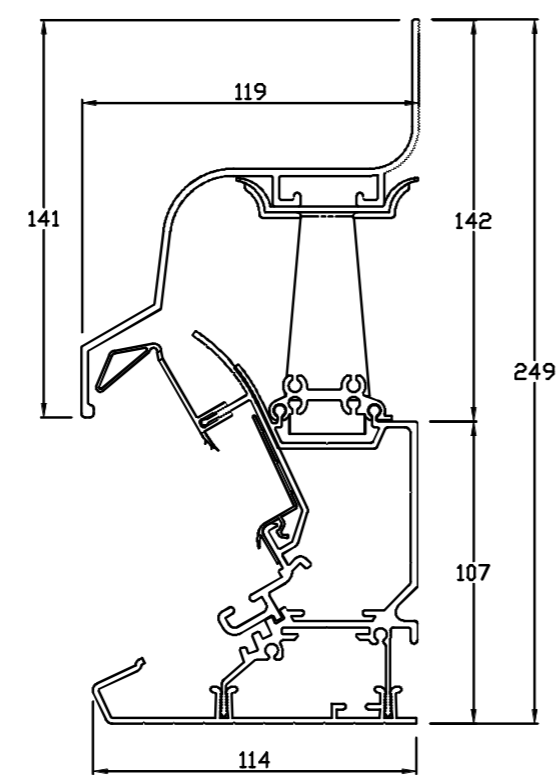


10 to 15° Mk2
Ventilated Wallplate

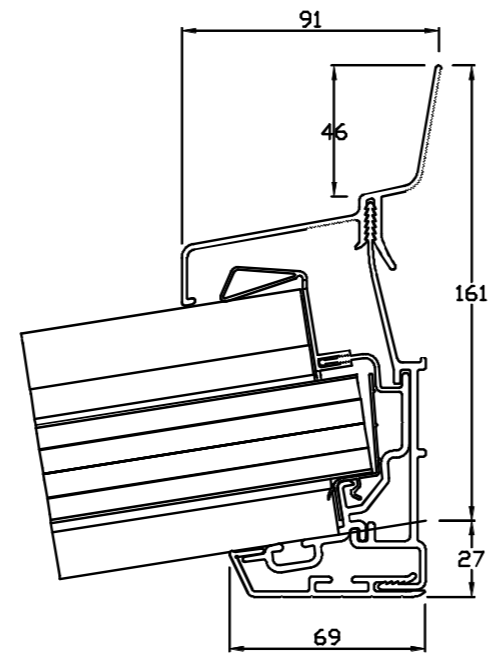

Slimline Ridge

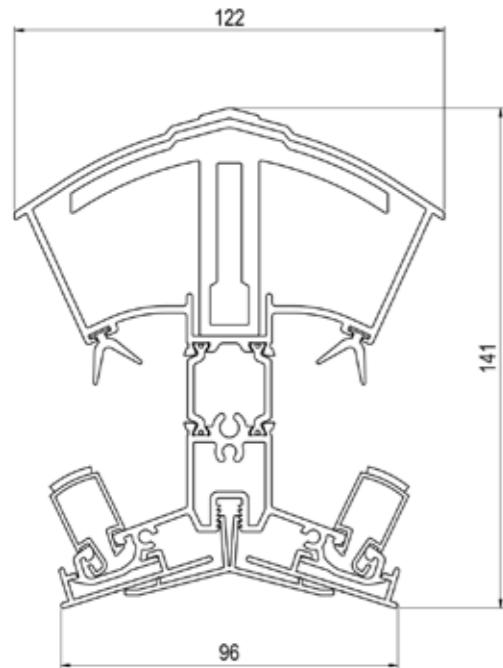

PWLA
Basic Wallplate

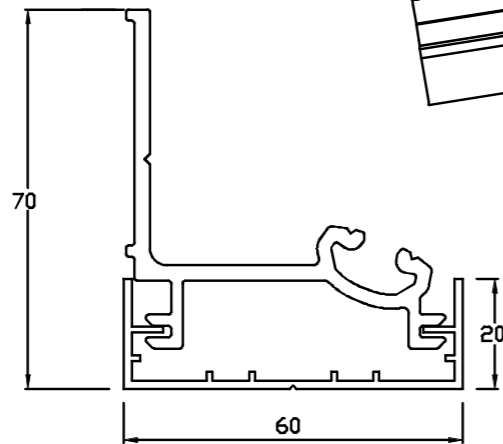


Section 6


GLAZING BARS MEASUREMENTS

Transom / Victorian


(Available with or without steel inserts - as shown)

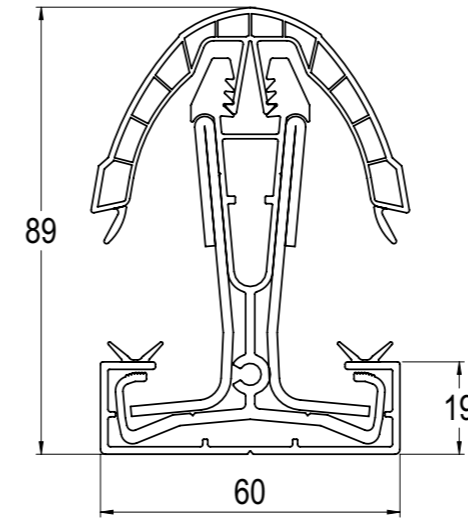


Georgian

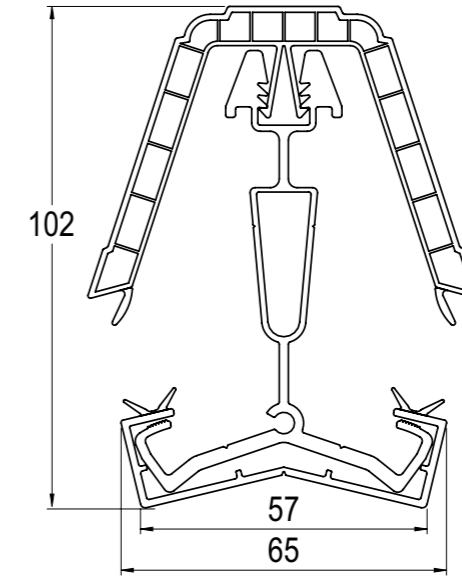


Wall starter

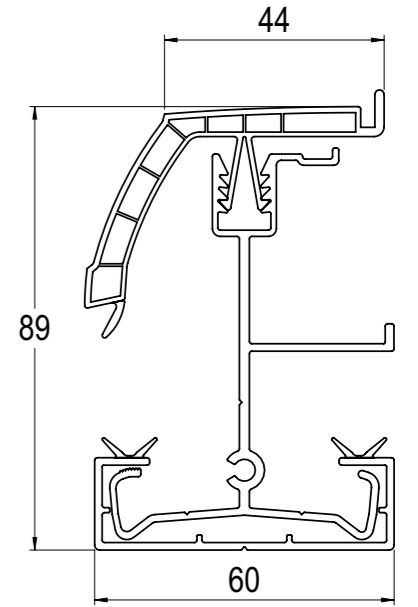

Gable Starter

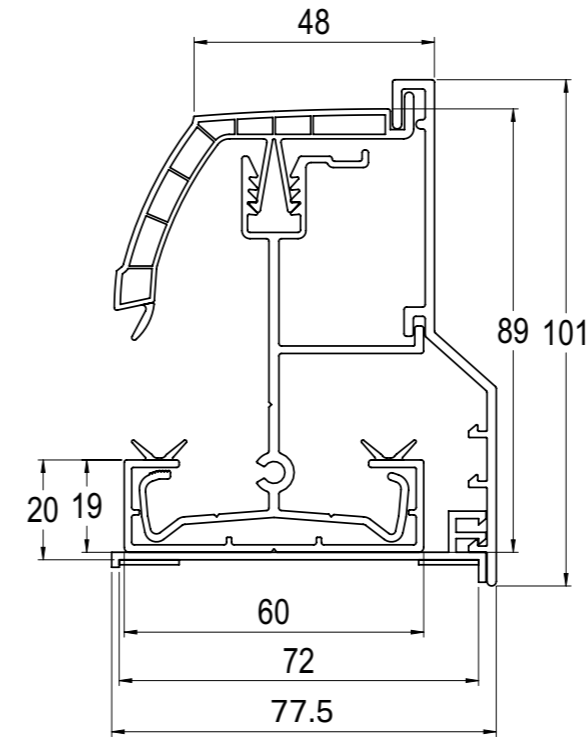


Georgian with bolster and cladding

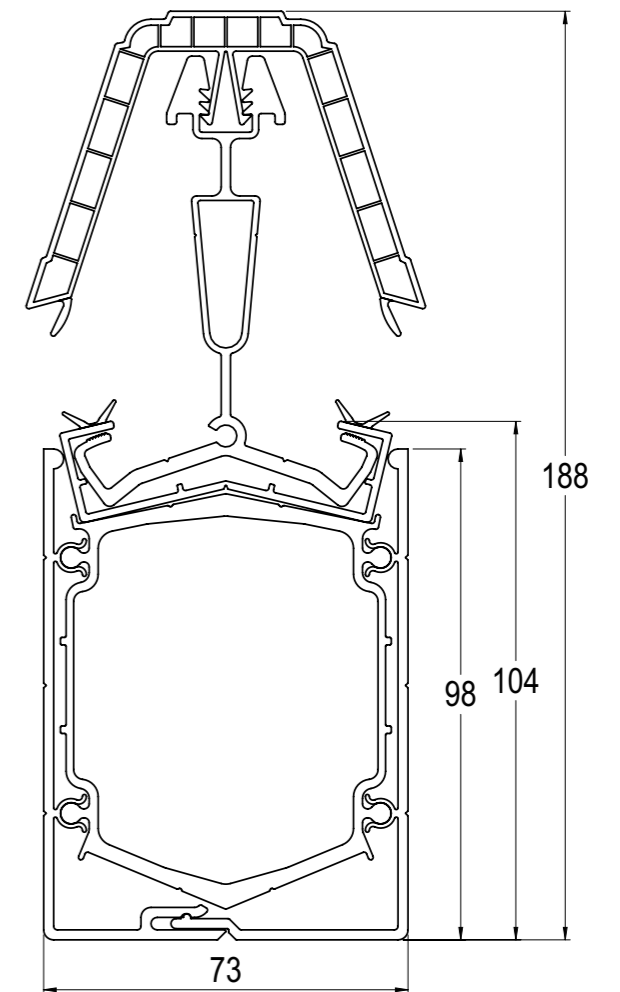


Section 6

FINIALS & CRESTINGS MEASUREMENTS (Not available on slimline ridge)


Elizabethan

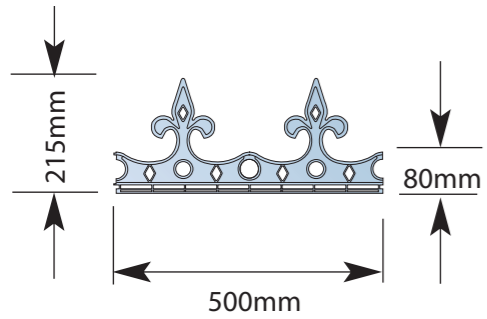


Renaissance

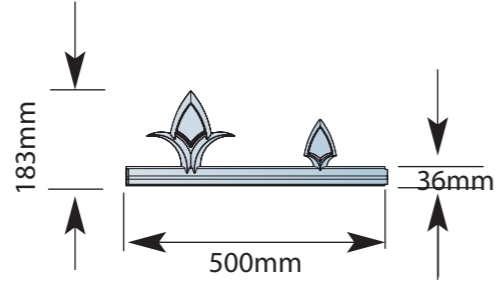


Classic

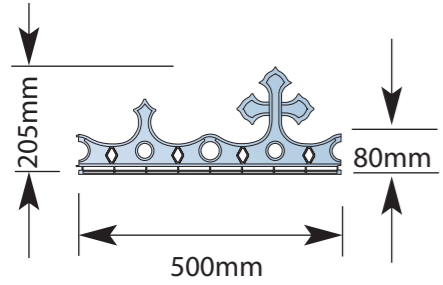


Baroque

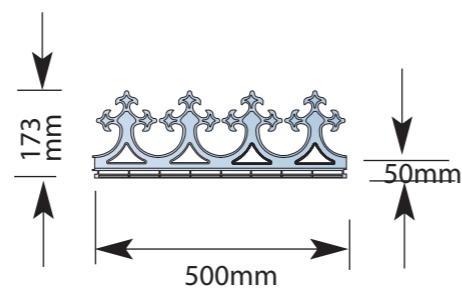


Tudor

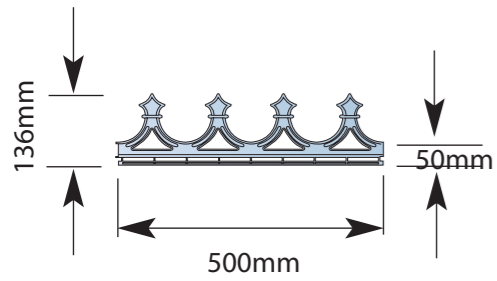


Ball

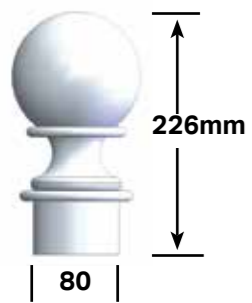


Coronet

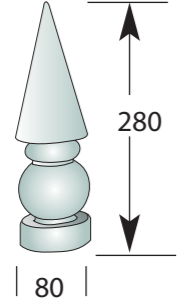


Pikestaff

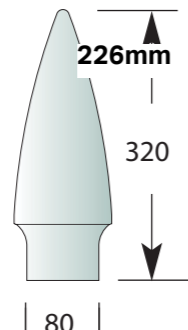

Sceptre

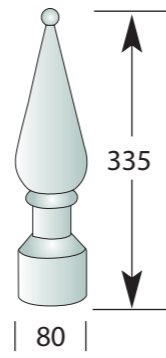


Classic

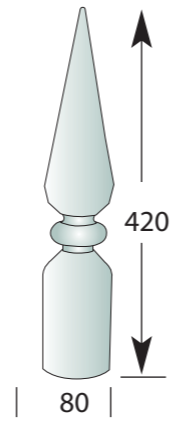




Section 7

165mm Marley Classic Box Gutter Adaptors

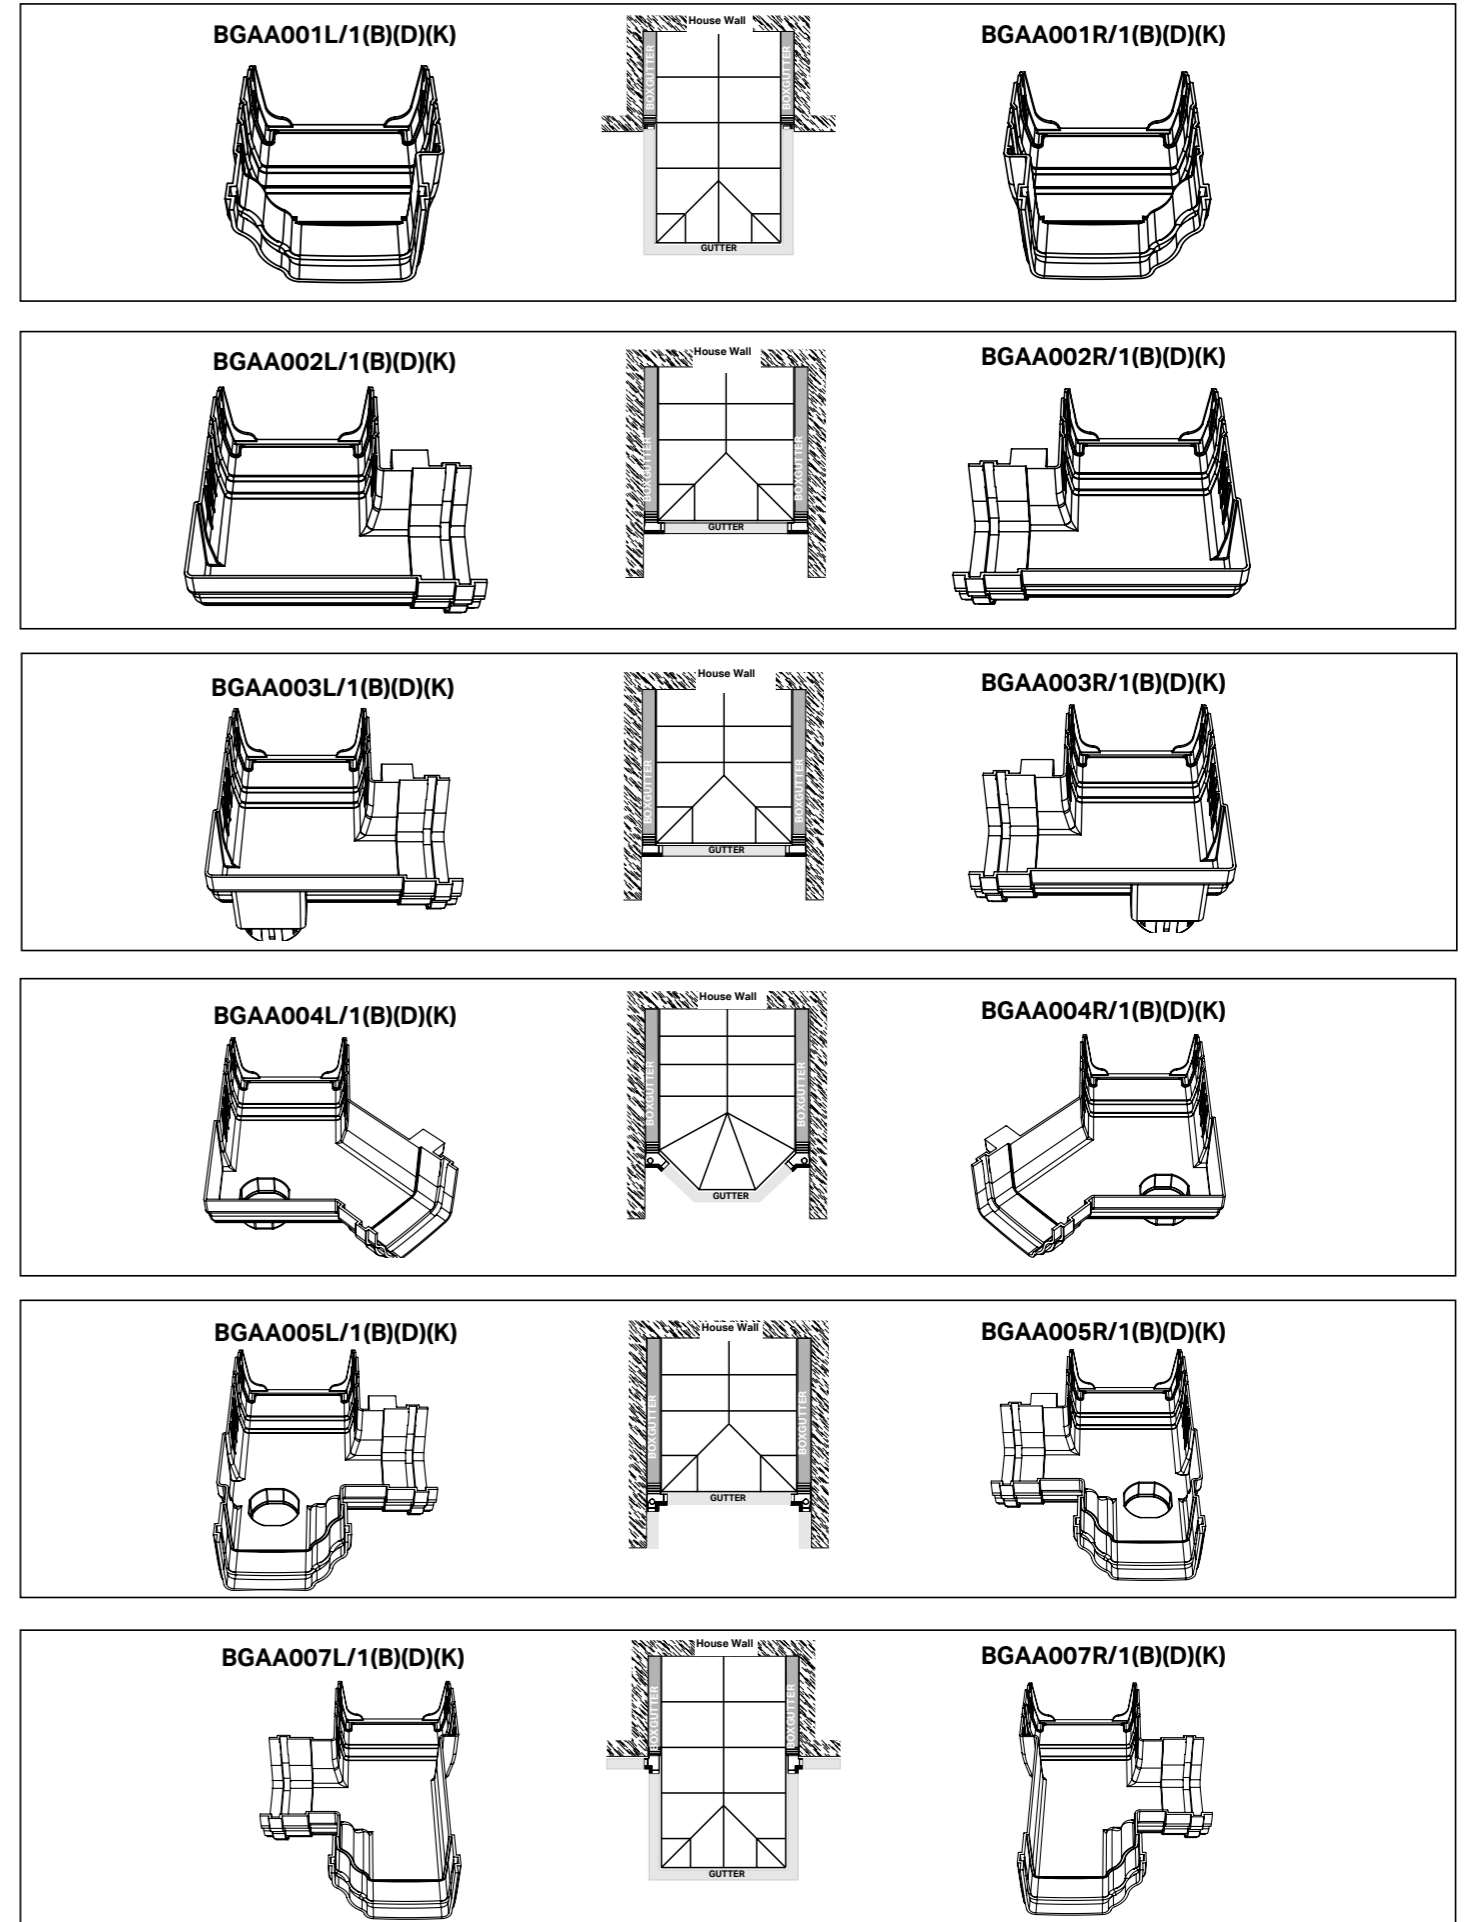

Section 7

265mm Marley Classic Box Gutter Adaptors


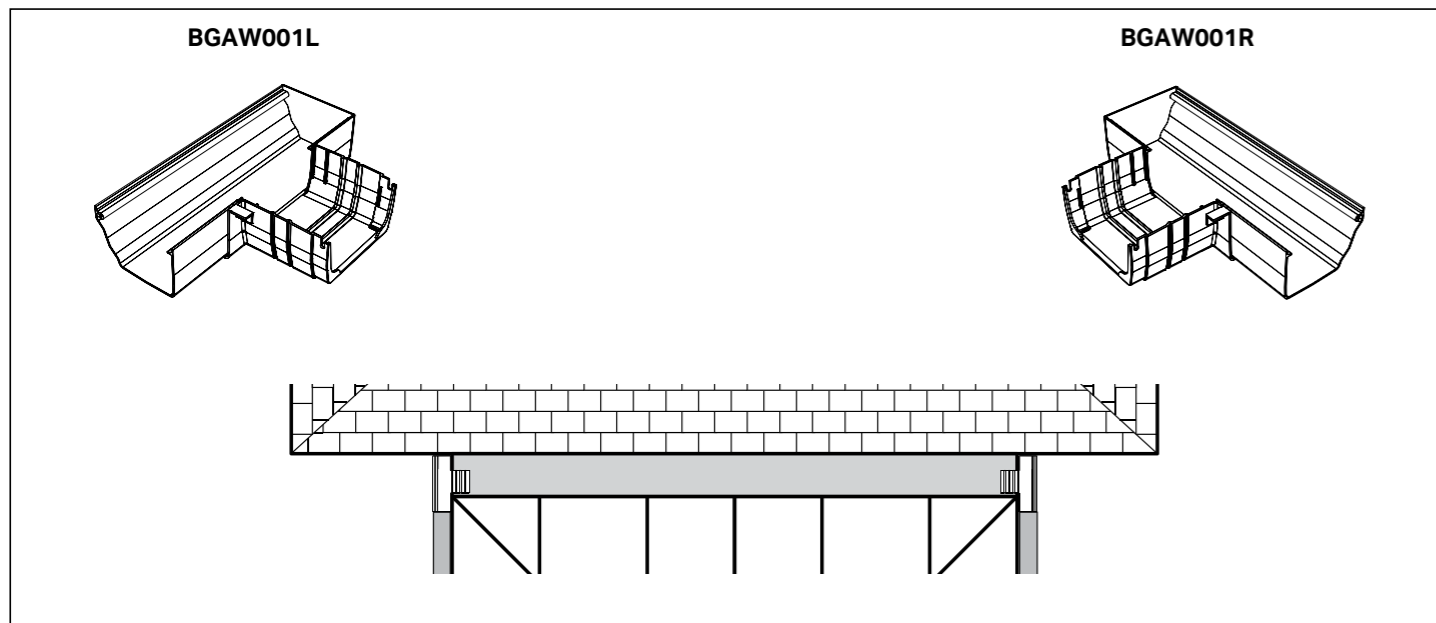
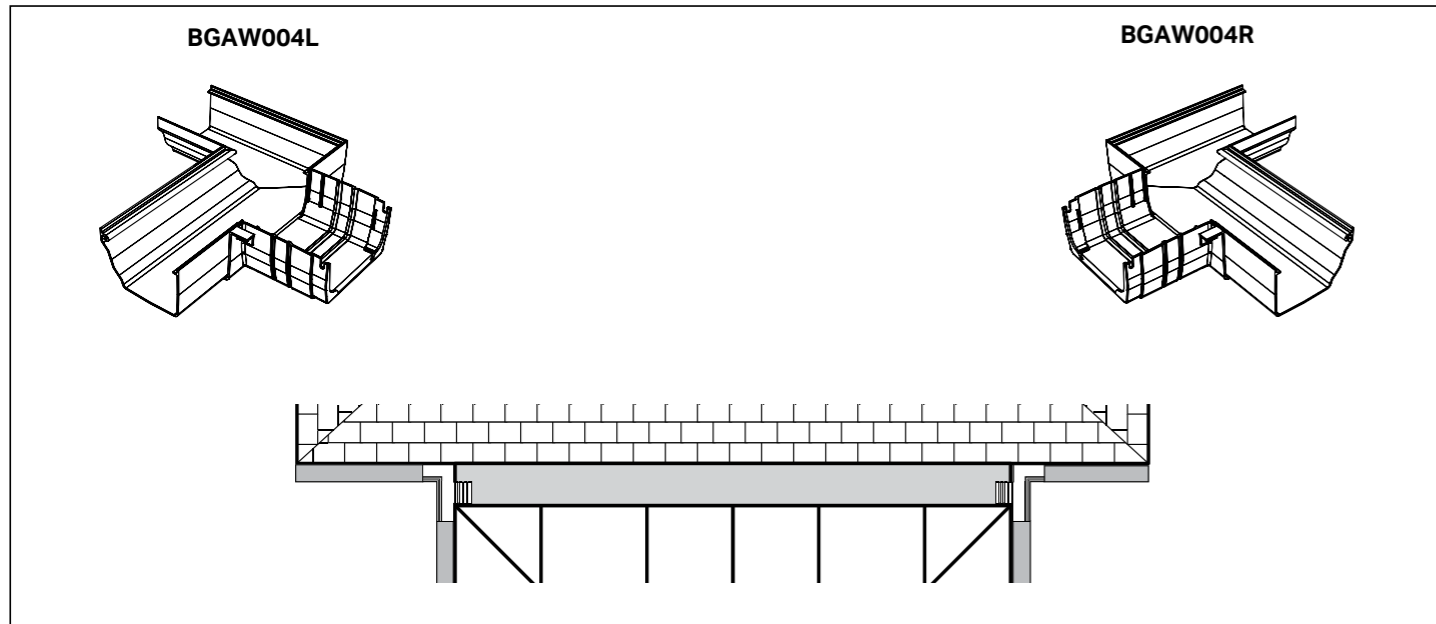
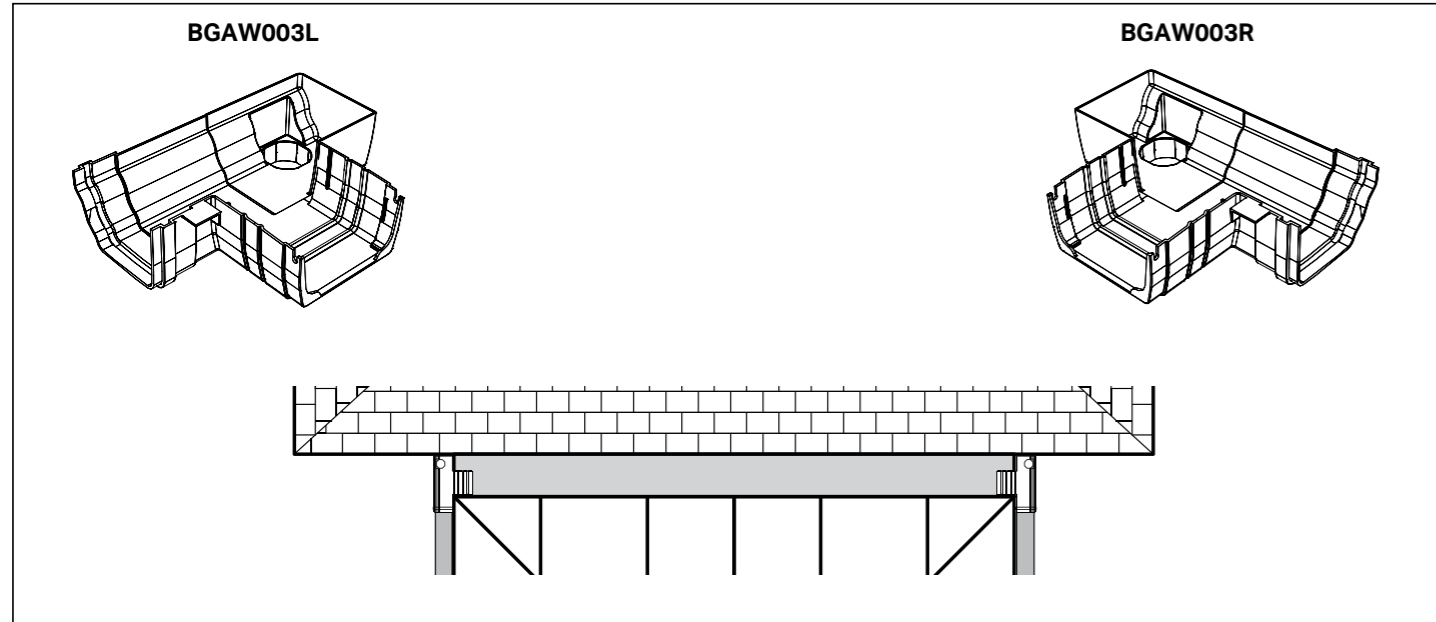


Marley Classic Rainwater Outlets



Section 8

LEFT HAND

RIGHT HAND

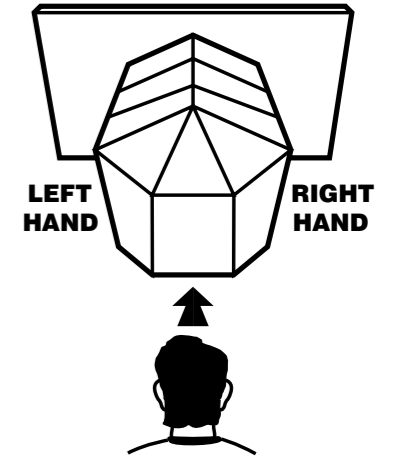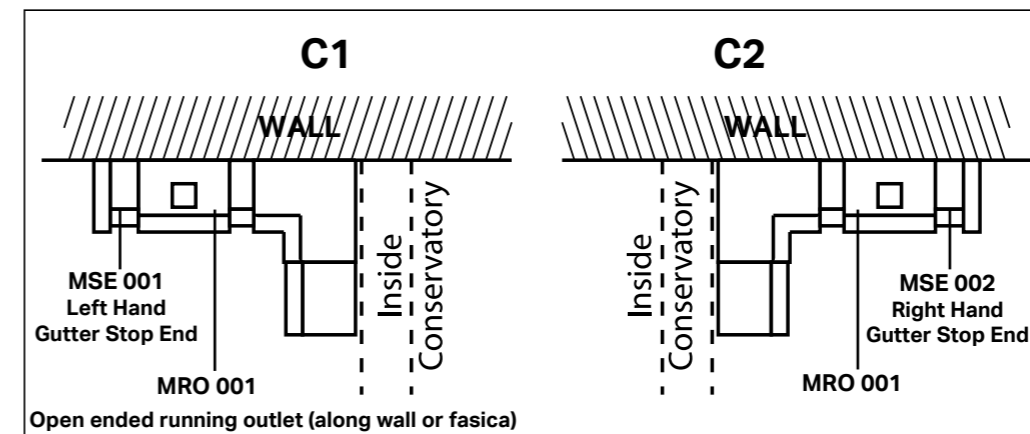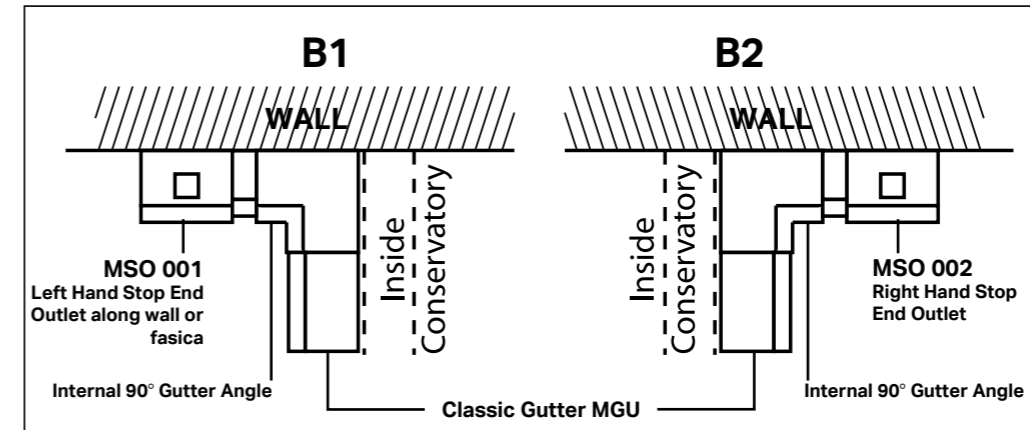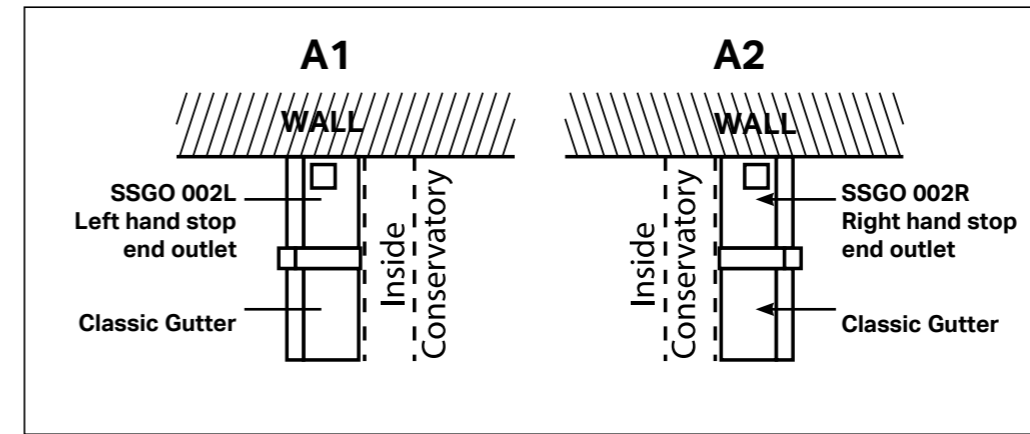

REMEMBER- MARLEY CLASSIC GUTTER IS 'HANDED'

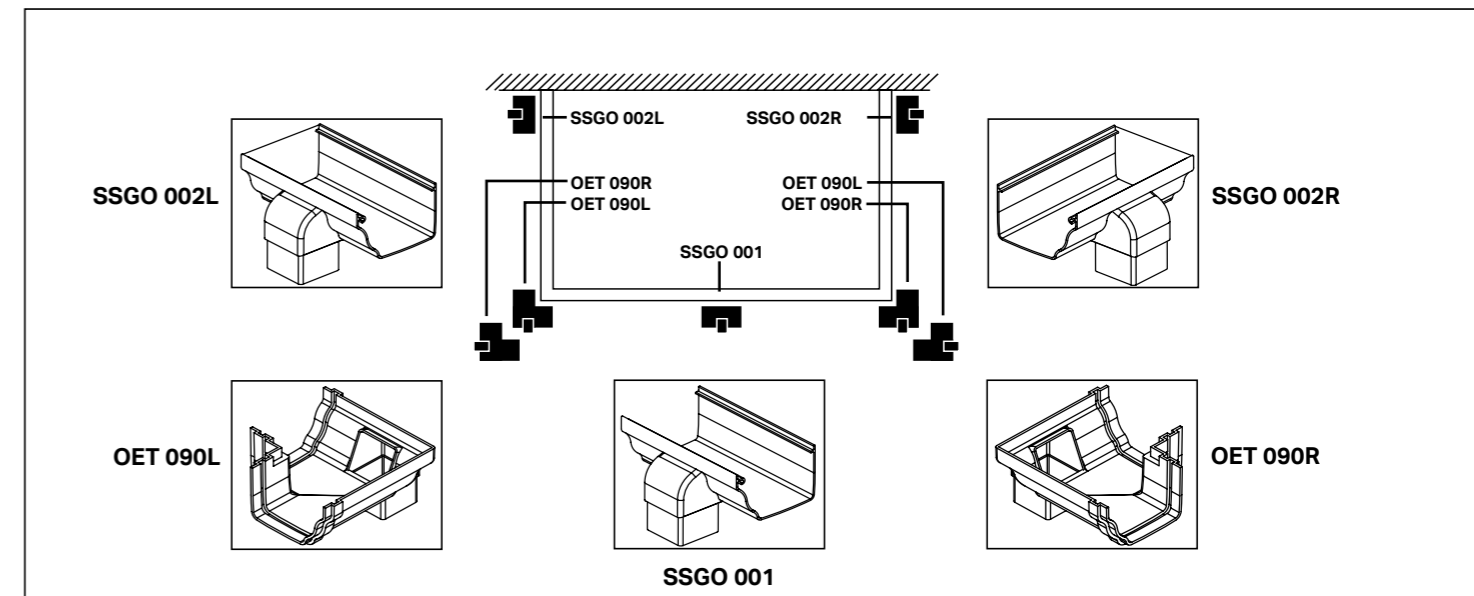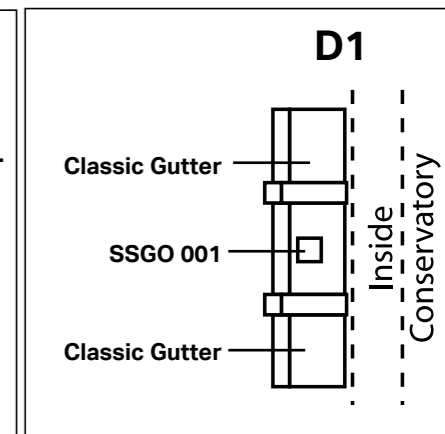

www.ultraframetrade.co.uk

Job No.: 3690 12/21 SURVEYO

It is Ultraframe's policy to continually seek to improve its products, processes and services, and we reserve the right to change specifications without prior notice. Ultraframe is a trading name of Ultraframe (UK) Limited.

Ultraframe
Transforming light and space

